HEWLETT PACKARD

User's Guide

HP B3740A Software Analyzer

User's Guide

Publication number B3740-97004
Fifth edition, November 1995

For Safety information, Warranties and Regulatory information, see the pages following the Index.

© Copyright Hewlett-Packard Company 1993-1995
All Rights Reserved

HP B3740A Software Analyzer

Viewing Source Code for Logic Analysis Data

Using the Software Analyzer, you can control modules in the HP 16500B logic analysis system or the HP 1660C/CS and HP 1670A families of benchtop (portable) logic analyzers. You can also view the program source code associated with captured logic analyzer trace data.

The Software Analyzer works with state analyzers and preprocessor subsystems in HP Logic Analyzers on the Local Area Network (LAN). The HP 1660C/CS families of logic analyzers must include the LAN interface (option 015).

With the Software Analyzer, you can:

- Use the Logic Analyzer window to set up traces and control the logic analyzer.
- Use the Source window to download symbolic information from OMF files to the logic analyzer.
- Use the Source window to view captured execution in terms of high-level "C" source lines.
- Use the Trace List Control window to scroll through the lines in the Source window as well as the state listing lines in the Logic Analyzer window.

Trademarks

Motif is a trademark of the Open Software Foundation in the U.S. and other countries.

MS-DOS® is a U.S. registered trademark of Microsoft Corporation.

Windows and MS Windows® are U.S. registered trademarks of Microsoft Corporation.

UNIX® is a registered trademark in the United States and other countries, licensed exclusively through X/Open Company Limited.

In This Book

1 Tutorial

2 Using the Software Analyzer

3 Reference

4 Common Problems

5 Installation

Glossary

Index

This book shows you how to use the Software Analyzer. It contains the following chapters:

- Chapter 1 is a brief tutorial that uses sample files to show you the steps you'll generally take when using the Software Analyzer.
- Chapter 2 is a more complete description of all the tasks you can perform when using the Software Analyzer.
- Chapter 3 describes the commands in the Software Analyzer main window, the HP E2450A Symbol Utility, supported symbol file formats, the General-Purpose ASCII (GPA) file format, and messages that can appear when using the Software Analyzer.
- Chapter 4 describes some of the common problems that can occur when using the Software Analyzer, why they happen, and how to solve them.
- Chapter 5 shows you how to install the Software Analyzer. It contains instructions for personal computers running MS Windows as well as for SUN and HP 9000 series 700 workstations running the UNIX operating system.

Contents

1 Tutorial

Step 1. Start the Software Analyzer 1–3
Step 2. Configure the Logic Analyzer 1–4
Step 3. Load the symbol database 1–7
Step 4. Set up the trigger and capture data 1–9
Step 5. Scroll data by assembly states 1–10
Step 6. Scroll data by source lines 1–11

2 Using the Software Analyzer

Generating Symbol Files 2–3

To compile and place symbols in the object file 2–3
To create General-Purpose ASCII symbol files 2–4

Starting and Exiting the Software Analyzer 2–5

To start the Software Analyzer interface 2–5
To connect to a logic analyzer 2–6
To exit the Software Analyzer 2–6

Downloading Symbols to the Logic Analyzer 2–7

To load a symbol file 2–7
To view or remove loaded symbol files 2–11

Making Trace Measurements 2–14

To trigger on a symbol 2–15

Viewing Trace Measurement Results 2–18

To scroll in the Source window 2–18
To scroll in the Logic Analyzer state listing window 2–19
To identify source file paths 2–20
To change Source window display options 2–20
To display symbols in the trace list 2–21

3 Reference

Main Window Commands 3-3

File→Download... 3-4
File→Exit 3-4
Settings→Connect... 3-5
Settings→Source View... 3-6
Settings→Inverted Logic Analyzer Mouse (Sun only) 3-7
Source File Lookup Failure dialog box 3-8

Logic Analyzer Symbol File Load Menu 3-9

OMF File field 3-10
Drive field 3-10
Label field 3-10
Module field 3-11
Load field 3-11
Current Loaded Files field 3-12
Section Relocation option 3-13

Logic Analyzer Symbol Browser Menu 3-15

Symbol Type Selection field (user vs. OMF) 3-16
Find field 3-17
Browse Results display 3-19
Align to xx Byte option 3-19
Offset option 3-20
Context display 3-21
Address display 3-21
Symbol Mode field 3-22

Supported Symbol File Formats 3-23

General-Purpose ASCII Symbol File Format 3–24

GPA Record Format Summary 3–25
SECTIONS 3–27
FUNCTIONS 3–28
VARIABLES 3–29
SOURCE LINES 3–30
START ADDRESS 3–30
Comments 3–31

Messages 3–32

4 Common Problems

If your logic analyzer is "in use" 4–3
If you have LAN connection problems 4–4
If you have alternate or missing fonts (Motif) 4–6
If there are no symbols in the Listing menu 4–8
If there is no source code in the Trace List Source window 4–9
If Trace List Source navigation operates illogically 4–11
If source and listing line numbers are different 4–12
If Next Line/Prev Line operations take a long time 4–13

5 Installation

Installing the Software Analyzer (MS Windows) 5–3

Step 1. Install Win32s 5–3
Step 2. Install the Software Analyzer 5–4

Installing the Software Analyzer (HP 9000/700) 5–5

Installing the Software Analyzer (SunOS) 5–7

Step 1. Mount the tape 5–8
Step 2. Install the software 5–9
Step 3. Run the configure script 5–10
Step 4. Install a SunOS patch 5–12
Step 5. Set the PATH environment variable 5–13

Installing the Software Analyzer (Solaris) 5–14

Step 1. Mount the tape 5–15
Step 2. Install the software 5–16
Step 3. Run the configure script 5–17
Step 4. Set the PATH environment variable 5–19

Installing the HP Logic Analyzer Software 5–20

Installing the Symbol Utility Software 5–21

Glossary

Index

1

Tutorial

This chapter uses sample configuration files and a demo program that you will use to configure the logic analyzer for the tutorial. For your convenience, the demo program is already compiled and linked.

This chapter includes the following steps to help you learn to use the Software Analyzer:

- Step 1. Start the Software Analyzer
- Step 2. Configure the logic analyzer
- Step 3. Load the symbol database
- Step 4. Set up the trigger and capture data
- Step 5. Scroll data by assembly states
- Step 6. Scroll data by source lines

Tutorial

Tutorial Works with Most HP Logic Analyzer Models

This tutorial will not work with the HP 1663C/CS 34-channel logic analyzer.

Before following the instructions in this tutorial, do the following.

- If you are using the HP 16500B logic analyzer mainframe, install the appropriate state analyzer module, with software version 2.00 or greater, into the mainframe. Refer to the documentation that comes with the logic analyzer module.
- If you are using the HP 16500B mainframe, install the HP 16500H or HP 16500L LAN Interface Module into the mainframe. Refer to the appropriate logic analyzer documentation.
- If you are using the HP 1660C/CS-Series Logic Analyzer, verify that it has the LAN interface hardware (option 015) installed.
- Connect the logic analyzer to your LAN. Set the controller to Ethernet (in the System External I/O menu on benchtop models, and in the System Configuration menu for the HP 16500B).
- Install the appropriate Logic Analyzer system software. See the following table and refer to the "Installation" chapter.

Table 1 **HP Logic Analyzer Products and Software Version Numbers**

Product	Software Version
HP B3740A Software Analyzer	1.00 or greater
HP 16500B Mainframe	3.00 or greater*
HP E2450A Symbol Utility Software for HP 16500B	3.00 or greater*
HP 1660C/CS-Series Logic Analyzer	1.00 or greater *
HP 1670A-Series Logic Analyzer	1.00 or greater *
HP E2450A Symbol Utility Software for HP 1660C/CS and 1670A	1.00 or greater*

* The Symbol Utility Software major software version number must match the HP logic analyzer major software version number (for example, 3.xx).

The E2450 Symbol Utility Software ships with the benchtop logic analyzer models and with the Software Analyzer.

- Install the Software Analyzer.
- Install the HP E2450A Symbol Utility Software in the logic analyzer.

See the "Installation" chapter for information about installing software.

Step 1. Start the Software Analyzer

1 Start the Software Analyzer by double-clicking on the Software Analyzer icon (in MS Windows) or by typing "swa" on the command line (or "swa &" to start it as a background task in Motif).

2 In the "LAN Connection" dialog box, enter the logic analyzer LAN address (or select it from the list of previously entered names).

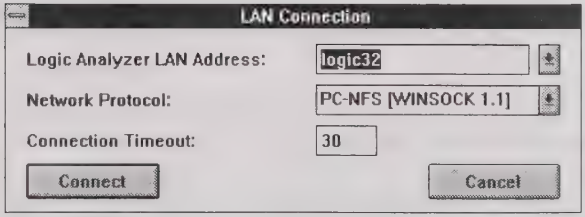

To find the correct HP 16500B LAN address, go to the HP 16500B and select the Communications field in the System Configuration menu. Then, select the Ethernet configuration field. If you are using the HP 1660C/CS-series or HP 1670A-series logic analyzer, go to the System External I/O menu and select the LAN setting field. The resulting menu shows the Internet (IP) Address of the logic analyzer.

3 If you are using the Software Analyzer on a personal computer running MS Windows, select the appropriate "Network Protocol".

4 Click the `Connect` button.

Four Software Analyzer windows appear after a short time:

- The main Control window labeled "Software Analyzer" that contains three pulldown menus.
- The Logic Analyzer window labeled "HP Logic Analyzer-<analyzer name | IP address>".
- The Source code window labeled "Trace List Source".
- A window with trace list navigation buttons labeled "Trace List Control".

If you cannot connect to the logic analyzer, refer to "If you have LAN connection problems" in the Common Problems chapter.

Step 2. Configure the Logic Analyzer

Normally, after starting the Software Analyzer you should set up the analyzer configuration and format for a specific preprocessor. For this tutorial, the analyzer configuration is included with the product. All you need to do is load the configuration file.

1 In the main Software Analyzer window, choose the File→Download... command.

2 In the File Download dialog box, download the appropriate sample configuration file, with the full path, as shown in the following table. Enter the configuration file name in the Local File box, then click the `Download` button.

Table 2 **Sample Configuration Files and Uses**

Sample Configuration File	Use with Logic Analyzer/ Module	Enter this Command in the File Box
m332_550._a	HP 1660C/CS-Series, HP 16550A	C:\TMP\M332_550._A
m332_555._a	HP 16555A, HP 16556	C:\TMP\M332_555._A
m332_554._a	HP 1670A-Series, HP 16554A	C:\TMP\M332_554._A

If you installed the Software Analyzer in its default path, you can find the sample configuration files either in \HPCOL\SAMPLES\SWA on the personal computer, or in /usr/hpcol/<platform>/samples/swa on the UNIX workstation. You can click on the **Browse...** button and use the resulting dialog to select the Local File.

The sample files whose names contain "m332" or "332" are for the Motorola 68332 demo. Files whose names contain "i386" or "386" are Intel 80386 demo sample files. The "readme" file(s) in the sample files directories provide more information about the sample files and how they were generated.

3 In the File Download dialog box, type "icpu32" in the Local File box to download the sample inverse assembler file. Type "C:\TMP\ICPU32" (which specifies the logic analyzer hard drive) in the Logic Analyzer File box. Then, click the **Download** button.

(The inverse assembler file for the Intel 80386 demo is "ia386e".)

4 Go to the System Hard Disk menu.

5 If the present logic analyzer directory is not \TMP, scroll through the list of files, highlight the appropriate directory name, and click on **Change Dir**.

To verify the present working directory, see the PWD: indicator line at the bottom of the Logic Analyzer window.

You can scroll through the list of files if you click on the graphical knob buttons and use the "shift-arrow keys", or if you hold down the right mouse button and drag the mouse. Use of the arrow keys may differ from use on a PC or in X-Windows.

6 Scroll through the list of files in the \TMP directory and highlight the configuration file you just downloaded.

7 In the System Hard Disk screen (with **Load** showing), click on the module selection field (next to **Load**) and choose the appropriate

module to load or analyzer for benchtop models. Click on **Execute**. Note the following figure.

Depending on the logic analyzer model you are using, when the load process finishes, the analyzer may display the following status messages: "Pods have been truncated. Clock and least significant pods have been preserved."

This figure shows an example of loading the M332_550._A configuration file into the HP 16550A State/Timing Logic Analyzer Module:

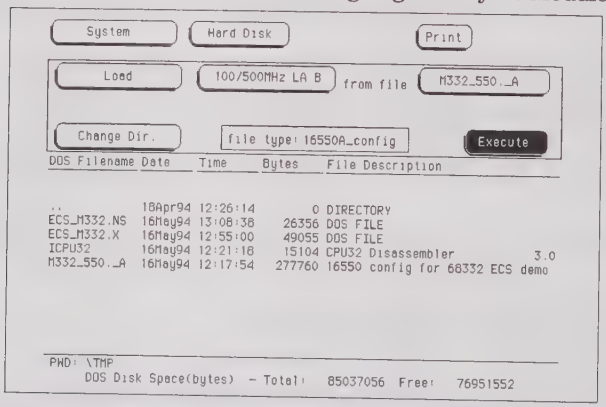

The configuration file contains label setup, IAL setup, and previously stored trace data.

Step 3. Load the symbol database

An Environmental Control System (ECS) demo program is used for this tutorial. For your convenience, it is already compiled and linked into the Object Module Format (OMF) file named "ecs_m332.x". You must transfer this OMF file to the logic analyzer to use its symbols.

1 In the File Download dialog box entry fields, type the local file "\HPCOL\SAMPLES\SWA\ECS_M332.X" (for MS Windows) or "/usr/hpcol/<platform>/samples/swa/ecs_m332.x" (for Motif). Then, type the logic analyzer file "C:\TMP\ECS_M332.X".

2 Click the **Download** button. When the download process finishes, click the **Close** button to close the File Download dialog box.

When the transfer completes, you can use the HP E2450A Symbol Utility to build a symbol database from this OMF file.

3 To enter the logic analyzer Symbol Utility subsystem, change from **System** to **Symbol Utility** in the Logic Analyzer window. If you are using an HP 1660C/CS-series or HP 1670A-series logic analyzer, change from **System** to **Symbols**. Click on **Specify Database**.

The main OMF Symbol Table screen appears. You can perform multiple functions related to setting up the symbol database. The first thing to do is enter the name of the file that was just downloaded.

4 In OMF Symbol Table screen, click on the **OMF File** entry field.

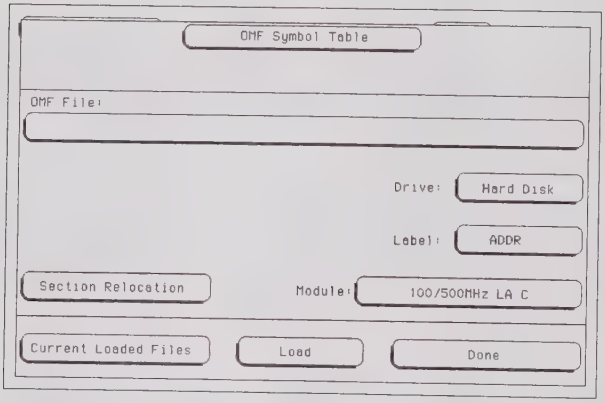

5 Scroll to the \TMP directory and click on **Select**.

a Click on SAMPLES. Then, click on **Select**.

b Click on SWA. Then, click on **Select**.

c Scroll through the list of files and highlight the "ECS_M332.X" file. Then, click on **Select**.

The next two entries rarely change. You can change the Drive entry to read files directly from the floppy drive. For this tutorial, keep it set to Hard Disk.

Always set the Label entry to "ADDR" for software traces. You can set this label to any arbitrary logic analyzer label. This is useful to allow hardware developers to read in hardware labels using the general purpose ASCII reader in the HP E2450A Symbol Utility. But, for normal software traces, you must always set this field to ADDR.

6 Click on the Module field and choose the appropriate module.

If there are multiple state analysis modules in an HP 16500B mainframe, the symbol manager must recognize the state analysis module to which this OMF symbol file attaches. This allows multiple programs to be traced at the same time using two different analysis modules and two different symbol files.

7 To build the symbol database, click on **Load**.

The logic analyzer builds an internal symbol database from the OMF file. An onscreen gauge informs you of the build progress.

After the build completes, you can view a trace list that has symbols in the display output.

8 In the OMF Symbol Table Screen, click on **Done**.

Step 4. Set up the trigger and capture data

Normally, you should next set up the trigger and run the analyzer to capture trace data. For this tutorial, trace data for the demo program was loaded when the analyzer configuration file loaded.

- To display the trace listing, click on Symbol Utility and choose the appropriate subsystem module (the module is always **Analyzer** in the benchtop logic analyzers). Then, click on **Configuration** and choose **Listing**.

A trace list, with symbols in the ADDR column, appears in the Logic Analyzer window. The address of the highlighted state corresponds to the function "main+000C" in the file "main_ecs.c" in the OMF file ECS_M332.X.

Also, the Trace List Source window becomes active. Its highlighted bar tracks the highlighted state in the trace list and shows the corresponding source code. In the Trace List Source window, you see the source code for file "main_ecs.c" (displayed in the title bar), and the highlighted bar appears in the middle of the function "main( )".

The trace listing may show a product-specific name when displayed on various logic analyzers.

Step 5. Scroll data by assembly states

To make it easy to view the trace data, the Software Analyzer has a "Trace List Control" window. This window contains four buttons that make it easier to scroll through the assembly and source views of the trace.

- To scroll to the next state in the trace listing, click the **`Next State`** button in Trace List Control window.

- To scroll to the previous state in the trace listing, click the **`Prev State`** button in Trace List Control window.

Notice that if you click the **`Next State`** button several times, the highlighted bar in the Trace List Source window also moves to a new corresponding source line.

Use the **`Next State`** and **`Prev State`** buttons when you wish to scroll one state at a time through the assembly level view.

Step 6. Scroll data by source lines

If you want to use the source code view, you can use the Trace List Control window's **`Next Line`** and **`Prev Line`** buttons to scroll through the state listing in source line increments.

- To scroll to the state corresponding to the next source line, click the **`Next Line`** button in Trace List Control window.

- To scroll to the state corresponding to the previous source line, click the **`Prev Line`** button in Trace List Control window.

When you scroll through source lines, the Software Analyzer searches the state listing until it finds the next state with a corresponding source line in the symbol database. When this is found, the state listing repositions to that state and the source window updates to display the matching source line.

You can also scroll backward in source line increments which can be very useful in understanding the flow of program execution (for example, how you arrived at a function, etc.).

This segment concludes the Software Analyzer tutorial.

Using the Software Analyzer

Using the Software Analyzer

This chapter describes the tasks you perform when you use the Software Analyzer:

- Generate Symbol Files
- Start and Exit the Software Analyzer
- Download Symbols to the Logic Analyzer
- Make Trace Measurements
- View Trace Measurement Results

Generating Symbol Files

This section shows you how to:

- Compile and place symbols in the object file.
- Create General-Purpose ASCII symbol files.

To view program symbols in the Listing or Waveform menus of the modules in the logic analyzer, you need to create a symbol file in one of the formats supported by the HP E2450A Symbol Utility. If your language tools cannot generate an Object Module Format (OMF) symbol file compatible with the Symbol Utility, you may create a symbol file in the General-Purpose ASCII (GPA) file format.

To compile and place symbols in the object file

- **Use your language tool "generate symbol file" option to compile, assemble, and link your program.**

Refer to your software development tool documentation for information about generating OMF files.

See Also

"Supported Symbol File Formats" in the Reference chapter for a list of the symbol file formats that are supported by the HP E2450A Symbol Utility.

To create General-Purpose ASCII symbol files

A General-Purpose ASCII (GPA) symbol file is a user-generated file that contains symbolic information. You can use GPA symbol files when Object Module Format (OMF) files do not contain symbolic information, when you wish to define symbols that are not in the OMF file, or when the HP E2450A Symbol Utility does not directly support the OMF of your language tools.

You can typically get symbol table information from a linker map file when you create a General-Purpose ASCII (GPA) symbol file.

- **Use an ASCII text editor or other text processing tool to create or modify a General-Purpose ASCII symbol file.**

Each entry in the symbol file must consist of a symbol name followed by an address or address range.

While symbol names can be very long, the logic analyzer system only uses the first 16 characters.

The address or address range corresponding to a given symbol appears as a hexadecimal number. The address or address range must immediately follow the symbol name, appear on the same line, and be separated from the symbol name by one or more blank spaces or tabs. Ensure that address ranges are in the following format:

```
beginning address..ending address
```

Example

```
main      00001000..00001009
test      00001010..0000101F
var1      00001E22      #this is a variable
```

This example defines two symbols that correspond to address ranges and one point symbol that corresponds to a single address.

See Also

"General-Purpose ASCII Symbol File Format" in the Reference chapter for a complete description of the GPA format.

Starting and Exiting the Software Analyzer

This section shows you how to:

- Start the Software Analyzer.
- Connect to a logic analyzer.
- Exit the Software Analyzer.

To start the Software Analyzer interface

- **Click the "HP Software Analyzer" icon (MS Windows) or type "swa &" on the command line (Motif).**

You can also start the Software Analyzer from the command line in MS Windows. The "swa" command has the following syntax:

```
swa [-a <ip_addr>] [-s] [-t <transport>]
```

`-a <ip_addr>` Specifies the host name or equivalent Internet (IP) Address of the logic analyzer. Enter IP addresses in integer dot notation (for example, 15.6.253.113).

`-s` Starts the Software Analyzer without opening the Source code window.

`-t <transport>` *This option is present only on personal computers.* It identifies the protocol of your network. The "transport" type can be MS-TCP/IP, PC-NFS, Novell-WP, or HP-ARPA. The transport types can be specified in upper or lower case characters and only a significant number of characters are required. For example, "m", "ms-tcp", and "MS-TCP/IP" are all equivalent.

To connect to a logic analyzer

1 In the Software Analyzer window, choose the Settings→Connect... command.

Note that the Connect menu option appears "greyed-out" if you are connected to a logic analyzer. If you want to connect to a different logic analyzer, exit the interface and start it again.

2 Enter the host name or Internet (IP) address of the logic analyzer in the "Logic Analyzer LAN Address" box.

3 If you are using the Software Analyzer on a personal computer running MS Windows, select the appropriate "Network Protocol".

4 Click the `Connect` button.

If you cannot connect to the logic analyzer, refer to "If you have LAN connection problems" in the "Common Problems" chapter.

To exit the Software Analyzer

- In the Software Analyzer window, choose the File→Exit command.

Downloading Symbols to the Logic Analyzer

This section shows you how to

- Load a symbol file.
- View or remove loaded symbol files.

To load a symbol file

1 In the Software Analyzer window, choose the File→Download... command. Enter the local and logic analyzer file names, and click the **Download** button.

2 In the Logic Analyzer window, select the Module field in the top left corner of the display. (When working with system-level menus, this field shows "System".) Choose **Symbol Utility** from the pop-up menu.

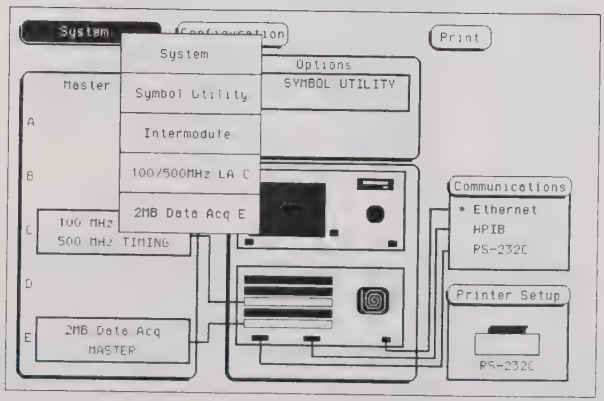

This figure shows the System Configuration menu of the HP 16500B.

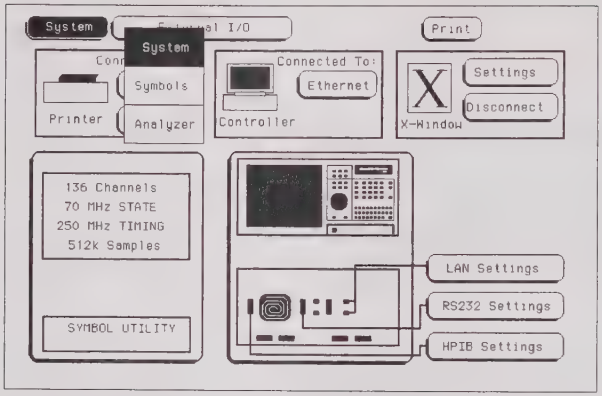

This figure shows the System External I/O menu of the HP 1670A-series.

3 Select the **`Specify Database`** field in the Symbol Utility menu.

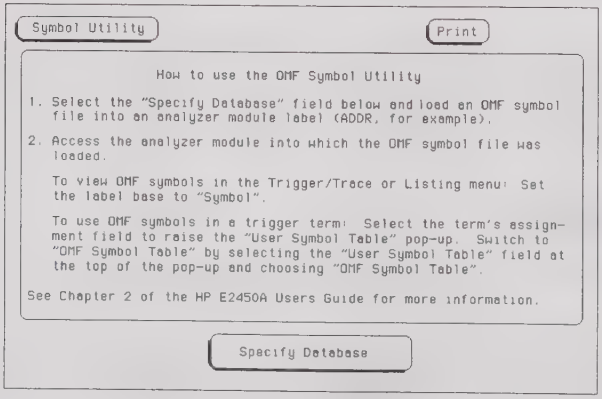
Symbol Utility
Print
How to use the OMF Symbol Utility
1. Select the "Specify Database" field below and load an OMF symbol file into an analyzer module label (ADDR, for example).
2. Access the analyzer module into which the OMF symbol file was loaded.
To view OMF symbols in the Trigger/Trace or Listing menu: Set the label base to "Symbol".
To use OMF symbols in a trigger term: Select the term's assignment field to raise the "User Symbol Table" pop-up. Switch to "OMF Symbol Table" by selecting the "User Symbol Table" field at the top of the pop-up and choosing "OMF Symbol Table".
See Chapter 2 of the HP E2450A Users Guide for more information.
Specify Database

4 Select the disk drive that contains the symbol file.

5 Select the measurement module into which you want to load the symbol file. On benchtop logic analyzers, the measurement module will always be **`Analyzer`**.

6 Select the **Label** field and choose the label to which you want to map the OMF symbols. (Typically, you will use the ADDR label for your system address bus.)

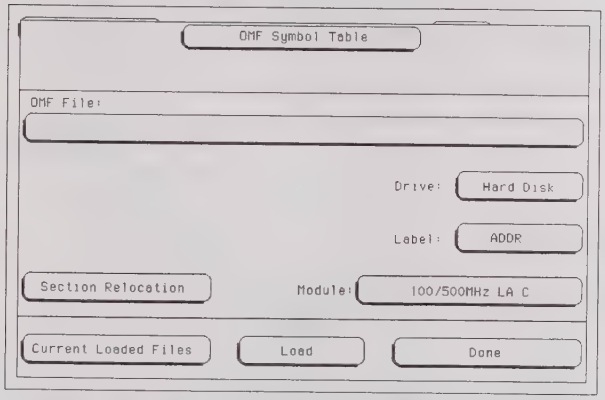

7 Select the **OMF File** field. In the pop-up menu, scroll to the desired file name. Click on the **Select** field to choose the file or change to a new directory.

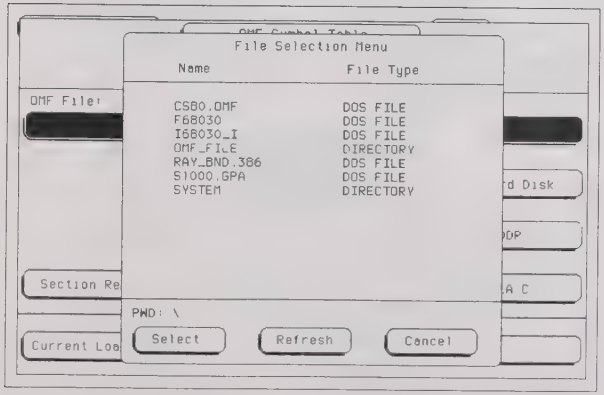

8 Select the **Load** field and wait for the database to be built.

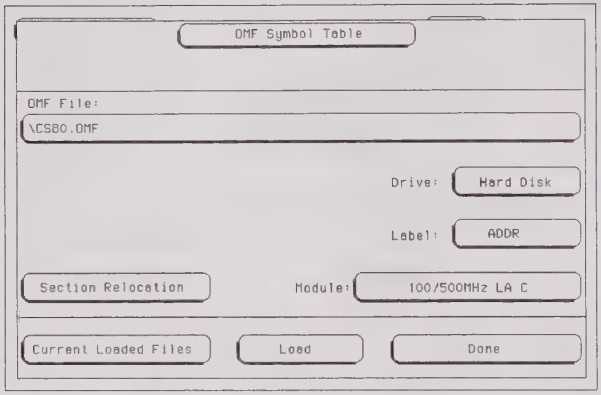

The symbol file loads into the measurement module you specified. You can load the same symbol file into several modules, and you can also load several symbol files into one module.

When you load a symbol file, the logic analyzer creates a database file. Database files have the extension ".ns". The database file appears in the same subdirectory as your OMF file.

9 Select **Done**.

To view or remove loaded symbol files

1 In the Logic Analyzer window, select the module field in the top left corner of the display. Choose **`Symbols`** or **`Symbol Utility`** from the pop-up menu.

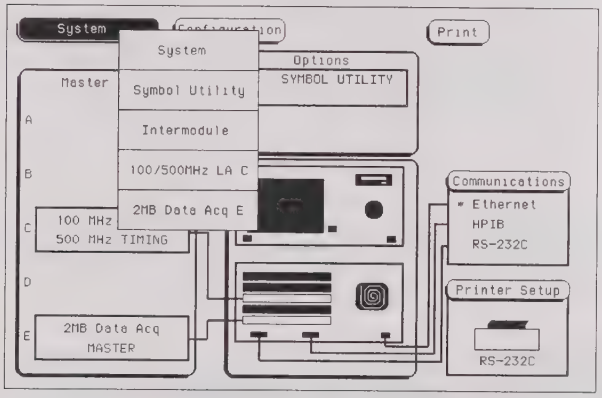

This figure shows the HP 16500B System Configuration menu.

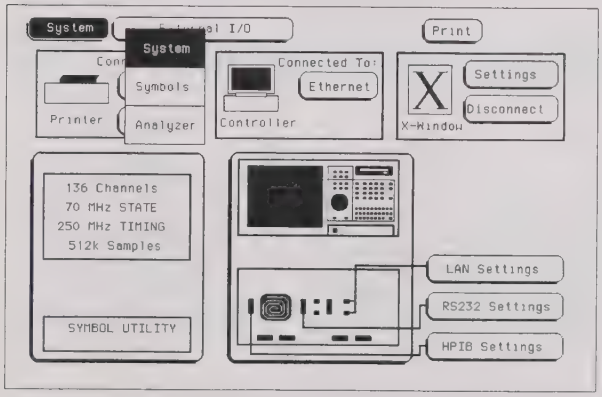

This figure shows the HP 1670A-series System External I/O menu.

2 Select the **`Specify Database`** field in the Symbol Utility menu.

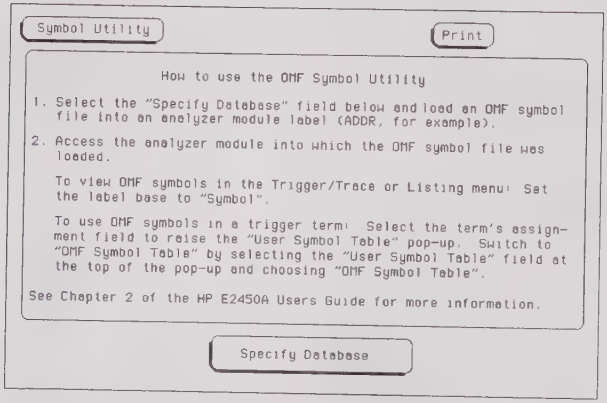
Symbol Utility
Print
How to use the OMF Symbol Utility
1. Select the "Specify Database" field below and load an OMF symbol file into an analyzer module label (ADDR, for example).
2. Access the analyzer module into which the OMF symbol file was loaded.
To view OMF symbols in the Trigger/Trace or Listing menus: Set the label base to "Symbol".
To use OMF symbols in a trigger term: Select the term's assignment field to raise the "User Symbol Table" pop-up. Switch to "OMF Symbol Table" by selecting the "User Symbol Table" field at the top of the pop-up and choosing "OMF Symbol Table".
See Chapter 2 of the HP E2450A Users Guide for more information.
Specify Database

This figure shows the HP 16500B version of the Software Analyzer. The version for benchtop logic analyzers is similar.

The Symbol Load menu appears.

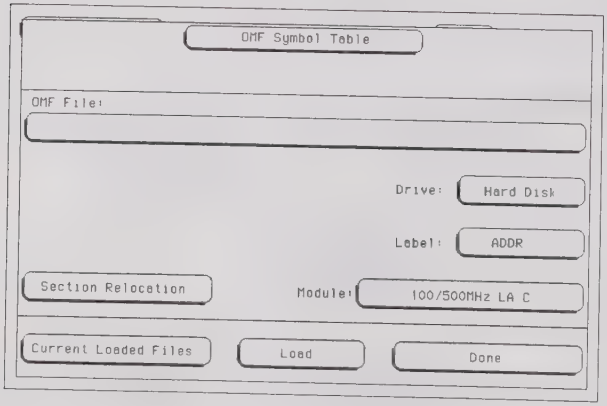

3 Select the **Current Loaded Files** field in the bottom left corner of the display.

A list of currently loaded symbol files is displayed.

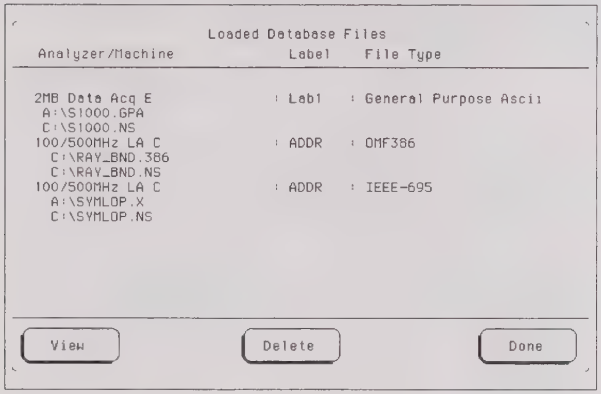

4 To remove a symbol file, highlight the measurement module and file name that you want to delete. Then, select **Delete** to remove the symbol file from the system.

5 To return to the OMF Symbol Table menu, select **Done**.

This section shows you how to make a trace measurement by triggering on a symbol.

To trigger on a symbol

Before you can trigger on OMF symbols, you must load a symbol file into the measurement module (see "Downloading Symbols to the Logic Analyzer").

1 Go to the Trigger Menu.

2 Set the base of the label with which you want to specify a trigger term to **`Symbol`**. Typically, you use the ADDR label.

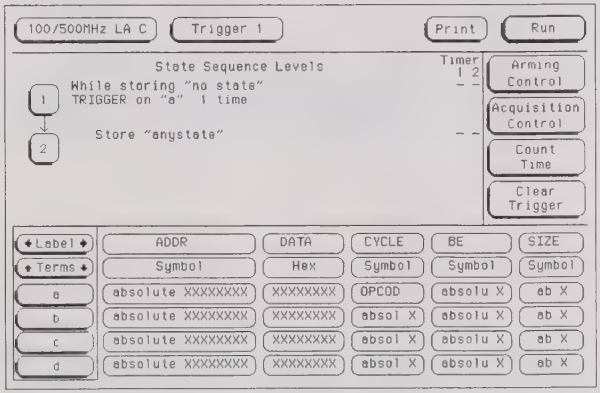

3 Click on the assignment field of the trigger term that you want to use.

The assignment field is the field that corresponds to both the term column on the left side of the display and the label row in the center of the display.

4 In the pop-up menu, select the **`User Symbol Table`** field. Choose **`OMF Symbol Table`** from the pop-up menu.

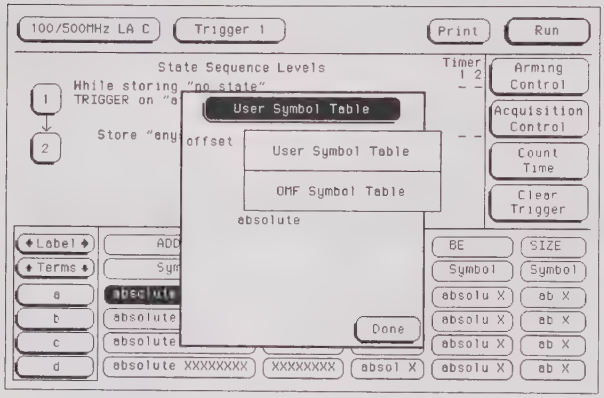

5 Scroll through the list of symbols and pick the one that you want. Select **Done**.

The trigger term is now defined as one of your OMF symbols.

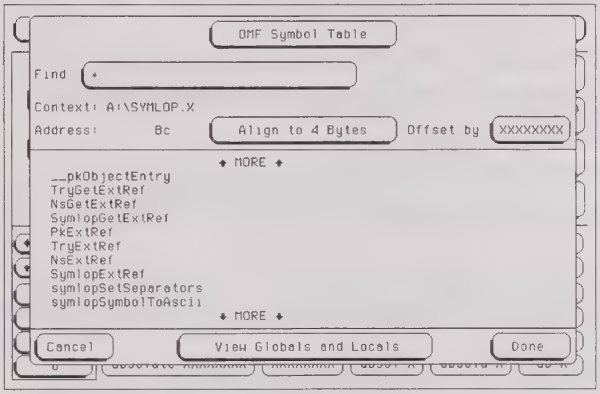

6 Use the symbol term in the trigger specification to trigger the logic analyzer.

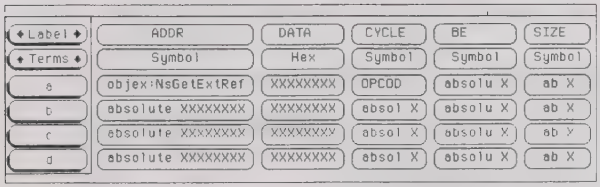

Viewing Trace Measurement Results

This section shows you how to:

- Scroll in the Source window.
- Scroll in the Logic Analyzer state listing window.
- Identify source file paths.
- Change Source window display options.
- Display symbols in the trace list.

To scroll in the Source window

- In the Trace List Control window, click the **`Next Line`** and **`Prev Line`** buttons.

- Highlighting a line in the state listing displays the corresponding source code in the Trace List Source window.

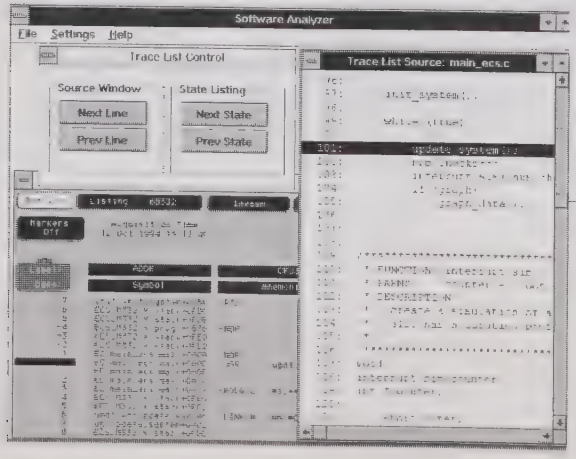

Clicking on the scroll bar, if present, lets you scroll through the source code—to view it only.

To scroll in the Logic Analyzer state listing window

Use one of the following procedures.

- In the Trace List Control window, click the `Next State` and `Prev State` buttons.
- In the Logic Analyzer window, with the state number field active, click the graphical knob buttons.
- In the Logic Analyzer window, with the state number field active, hold down the right mouse button and drag the mouse.

  Dragging up or to the right duplicates clockwise knob movement. Dragging down or to the left duplicates counter-clockwise knob movement.

- In the Logic Analyzer window, press the keyboard Shift-arrow keys.

  If you hold the Shift key down and press the up or right arrow key, you can duplicate clockwise knob movement. Pressing the down or left arrow key duplicates counter-clockwise knob movement.

To identify source file paths

1 In the Software Analyzer window, choose the Settings→Source View... command.

2 Type the source file path into the **Source Path** box.

3 If you want to insert the source file path before an existing path, in the list of paths, select the one that you want to insert first.

4 Click the **Insert** button.

5 When you finish inserting paths, click the **OK** button.

To delete a path from the list, select it and click the **Delete** button. A deleted path is automatically pasted into the **Source Path** box in case you want to re-insert it in a different place.

To change Source window display options

1 In the Software Analyzer window, choose the Settings→Source View... command.

2 To set the tabstops, enter the number of spaces between tabstops in the **Tab Width** box.

3 To show line numbers, select the **Line Numbers** check box.

4 When you finish changing the Source window display options, click the **OK** button.

To display symbols in the trace list

Before you can display symbols in the trace list, you must load a symbol file into the measurement module.

1 **Display the trace listing in the Analyzer Listing menu of the logic analyzer.**

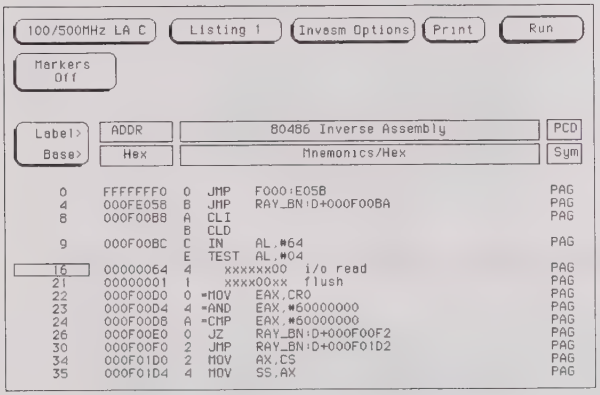

2 Select the base of the ADDR label. If you loaded the OMF symbols into a label other than ADDR, select the base for that label.

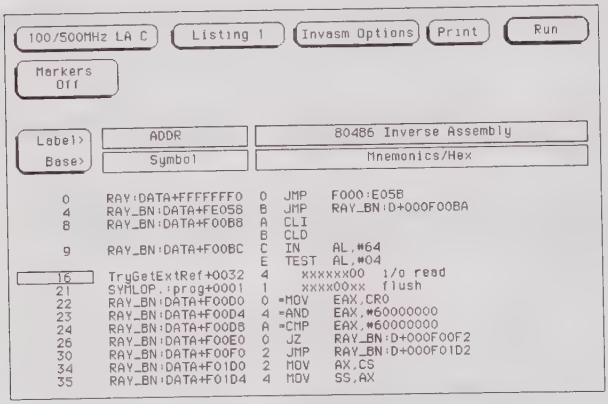

3 Choose **Symbol** from the base pop-up menu field.

User Symbols take precedence over OMF symbols in the display. If you created User Symbols that overlap with OMF symbols, the User Symbols display in the listing instead of the OMF symbols.

Reference

Reference

This chapter describes the following:

- Main Window Commands
- Logic Analyzer Symbol File Load Menu
- Logic Analyzer Symbol Browser Menu
- Supported Symbol File Formats
- General-Purpose ASCII Symbol File Format
- Messages

Main Window Commands

You can choose the following commands from the menu bar in the Main window:

- File→Download...
- File→Exit
- Settings→Connect...
- Settings→Source View...
- Settings→Inverted Logic Analyzer Mouse (Sun only)

The Source File Lookup Failure dialog may appear while you use the Software Analyzer.

File→Download...

- Select File→Download... to download files to the logic analyzer.

These files are typically OMF files. You download them to rebuild the symbol database.

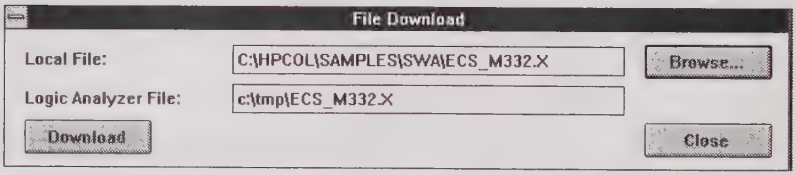

`Local File` Specifies the local file for downloading to the logic analyzer.

`Browse...` Opens a dialog box that you use to select the local file.

`Logic Analyzer File` Specifies where the file is to be placed in the logic analyzer file system. Enter the logic analyzer path.

`Download` Starts the download and may bring up a "working" dialog which reports on the number of bytes transferred.

`Close` Aborts the file download and closes the window.

File→Exit

- Select File→Exit to exit the Software Analyzer.

Settings→Connect...

- Select Settings→Connect... to specify and make the LAN connection to the logic analyzer.

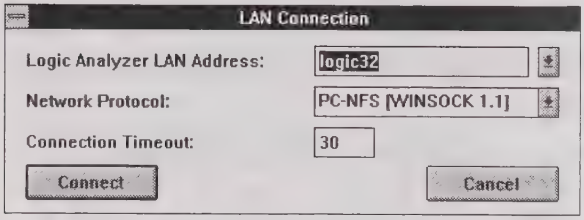

This dialog also appears when you do not specify the logic analyzer LAN address (and protocol) in the command line when starting the Software Analyzer interface.

`Logic Analyzer LAN Address` Specifies the host name or equivalent Internet (IP) Address of the logic analyzer. Enter IP addresses in integer dot notation (for example, 15.6.253.113).

`Network Protocol` *This option is present only on personal computers running MS Windows 3.1*, and lets you identify the protocol of your network. You can choose HP-ARPA, MS-TCP/IP [WINSOCK1.1], Novell-WP, or PC-NFS [WINSOCK1.1].

`Connection Timeout` Specifies the number of seconds to wait for the logic analyzer connection. Control of the interface returns when the connection is made or when the timeout occurs. Timeout values can be from 3 to 300 seconds.

`Connect` Attempts the connection to the specified logic analyzer. If you cannot connect to the logic analyzer, refer to "If you have LAN connection problems" in the Common Problems chapter.

`Cancel` Closes the dialog box without connecting.

Settings→Source View...

- Select Settings→Source View... to specify the source file search path and Source window settings.

This figure shows the Source View Settings dialog box.

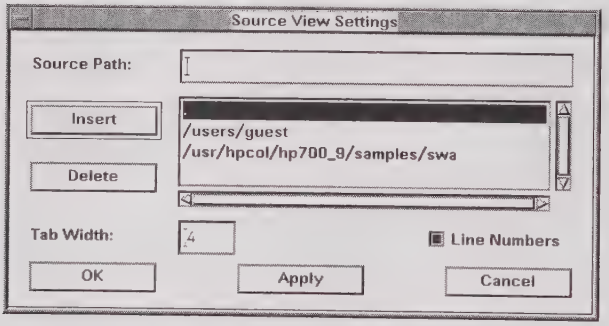

`Source Path` Lets you specify a source path to be inserted in the list. When looking for the source file to display in the Trace List Source window, the Software Analyzer searches the listed directories in the same order as they appear.

`Insert` Inserts the source path in the list, either before the highlighted line or at the end of the list if no line appears highlighted.

`Delete` Deletes the highlighted source path from the list. The deleted source path is copied to the entry box in case you want to insert it in a different place in the list.

`Tab Width` Sets the number of spaces between tab stops. Values are from 1 to 32.

`Line Numbers` Toggles line numbers ON or OFF.

`OK` Changes the settings and closes the dialog box.

`Apply` Applies the Tab Width and Line Numbers settings to the Trace List Source window without closing the dialog.

`Cancel` Closes the dialog box without changing the settings.

Settings→Inverted Logic Analyzer Mouse (Sun only)

- **Select Settings→Inverted Logic Analyzer Mouse to toggle the use of the left and right mouse buttons in the Logic Analyzer window.**

  In the default mode (not inverted), the mouse buttons behave as on the logic analyzer: left—click to activate a menu or button, right—drag to scroll a list.

  If you turn on the "Inverted Logic Analyzer Mouse", the operations of the right and left mouse buttons are reversed (similar to the customary mouse button operation for Sun OpenWindows applications).

Source File Lookup Failure dialog box

This dialog box appears when the Software Analyzer cannot locate the source file for display in the Trace List Source window.

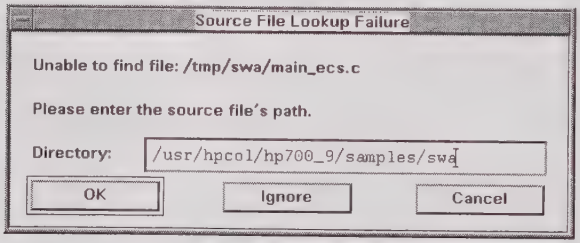

`Directory` Lets you enter the source path of the file that could not be found.

`OK` Looks in the specified directory for the source file. If the lookup succeeds, the new path is added to the list of paths in the Source View Settings dialog, and the Source window updates. An error dialog appears if the source file cannot be found.

`Ignore` No further attempt is made to find the source file for the rest of the session (unless its path is added to the Source View Settings dialog).

`Cancel` Ignores the source lookup; however, the dialog appears again the next time you attempt the source file lookup.

Logic Analyzer Symbol File Load Menu

The OMF Symbol Load menu loads the OMF files containing the desired symbols into the logic analyzer.

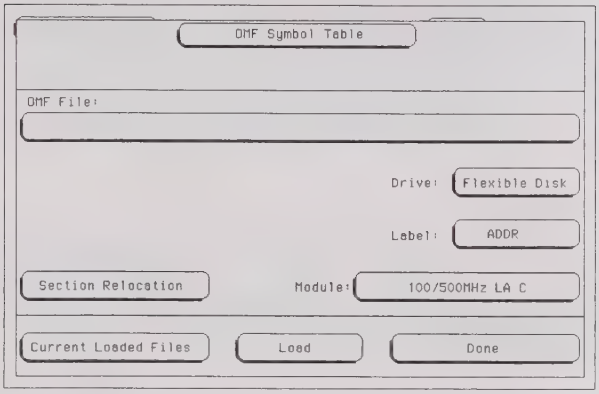

These are the OMF Symbol Load menu areas that you can access:

- OMF File field
- Drive field
- Label field
- Module field
- Current Loaded Files field
- Section Relocation option

OMF File field

Use the OMF File field to select the OMF file that you want to load into the system. When you initially access the OMF Symbol Table menu, the OMF File field appears blank.

To use this field, select it using the mouse or keyboard. A File Selection pop-up menu appears. The pop-up menu shows you a list of files at the root of the drive currently selected in the Drive field. Scroll the list of files to select the symbol file that you want to use. Use the **`Select`** field to choose the file or to choose a subdirectory to browse. Select **`Cancel`** to close the menu.

Refresh field

The **`Refresh`** field causes the Symbol Utility to reread the contents of the disk drive. The Symbol Utility does not immediately read changes made to the disk drive contents. Use the **`Refresh`** key to reread the disk drive contents if they change.

Drive field

Use this field to specify the disk drive that contains the OMF file that you want to load. You can specify "Hard Disk" for the logic analyzer hard disk drive, or "Flexible Disk" for the logic analyzer flexible disk drive.

Label field

Use this field to specify the data label to which the symbols will correspond. In most cases, you will use the ADDR label because you will load symbols that correspond to processor address values. If you load symbols that correspond to another label, select this field and choose the appropriate label from the pop-up menu.

Module field

Use this field to specify the measurement module into which you want to load the symbols. When you select this field, the pop-up menu lets you choose from measurement modules currently installed in the logic analyzer frame. If you are using an HP 1660C/CS-series or HP 1670A-series benchtop logic analyzer, you can only choose **`Analyzer`**. Once the symbol file is loaded, you can view symbols in the Listing and Trigger menus of the specified module. To view symbols in more than one module, specify a different module in the **`Module`** field and load the symbol file again.

Load field

Select this field to load the symbol file into the logic analyzer. During the load process, a symbol database file with a ".ns" extension is created for each file you load.

If you load the OMF symbol file from the hard disk drive, the .ns database file will be created in the same subdirectory containing the OMF file. If you load the OMF file from the flexible disk drive, the directory path from the flexible disk drive is duplicated on the hard disk drive, and the .ns database file is created in the duplicated directory.

Once the .ns file is created, the Symbol Utility will use this file as its working symbol database. The next time you must load symbols into the system, you can load the .ns file explicitly by placing the .ns file name in the **`OMF File`** field. You can purge the OMF file from the disk after the .ns file is created.

OMF file versions

If you load an OMF file that was previously loaded, a new .ns file is created only if the OMF file is newer than the existing .ns file; otherwise, the existing .ns file is used.

Multiple files

You can load the same symbol file into several modules, and you can load multiple symbol files into one module. Symbols from each of the files that you load will appear in the OMF Symbol Browser menu and can be used to create trigger terms for the logic analyzer.

Current Loaded Files field

Select this field to view a list of the symbol files that are currently loaded into measurement modules.

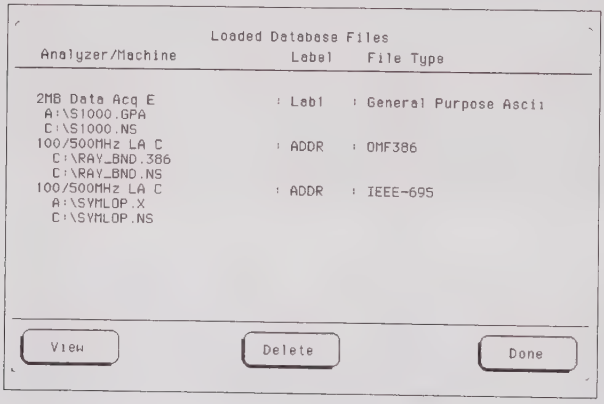

Delete Field

The Loaded Database Files pop-up menu provides a **Delete** field that you can use to remove a symbol database from a measurement module. Highlight the module and symbol file that you want to remove. Then, select the **Delete** field to remove the file.

View Field

The **View** field selects a database in the OMF Symbol Table load menu. If more than one database has been loaded, you can choose the desired database by highlighting the analyzer and file name and selecting the **View** field.

The file name that you select will appear in the **OMF File** field in the main OMF Symbol Table load menu. You can then change the file characteristics, such as the Section Relocation options.

Section Relocation option

The Section Relocation option lets you add offset values to the symbols in an OMF file. Use this option if some of the sections or segments of your code are relocated in memory at run time. Relocation can occur if your system dynamically loads parts of your code, causing the memory addresses where the code is loaded to not be fixed.

To use this option, highlight the memory section you want to offset and then click the **Select** field. Choose one of the offset options described below.

If you loaded multiple symbol files, the Section Relocation option applies to the file currently displayed in the **OMF File** field. To select a different file, use the **View** option in the Current Loaded Files menu.

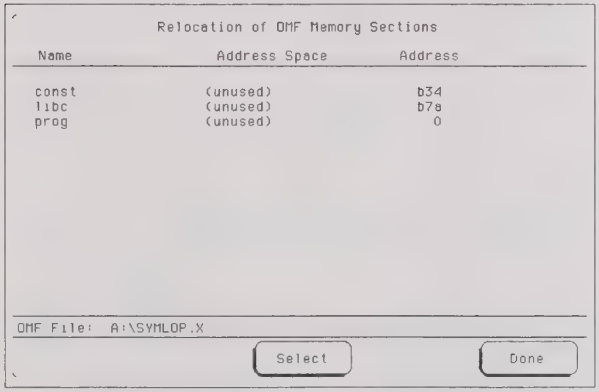

Set Absolute Section Location

When you know the run-time address of the section, use this option to set an absolute address for the start of the selected section.

Offset This Section

When you know the relocation offset of the section, use this option to add an offset to the start of the selected section. The value entered will be added to the section address that was contained in the OMF file. All of the symbols in the section's address range will be offset by this value.

Offset All Sections

Use this option to add an offset to the starting addresses of all sections in the selected OMF file. The values entered will be added to all relocatable sections in your program. You will typically use this option if you have PC relative code and data.

A section that contains symbols for hardware addresses will usually be indicated as nonrelocatable in the OMF file. The symbols for these sections will not be relocated.

The OMF Symbol Browser menu lets you browse through the symbols that re-loaded into a measurement module. You can use the symbols as trigger terms in the Trigger menu. Search features and wildcard characters are available to help you find the symbols that you want.

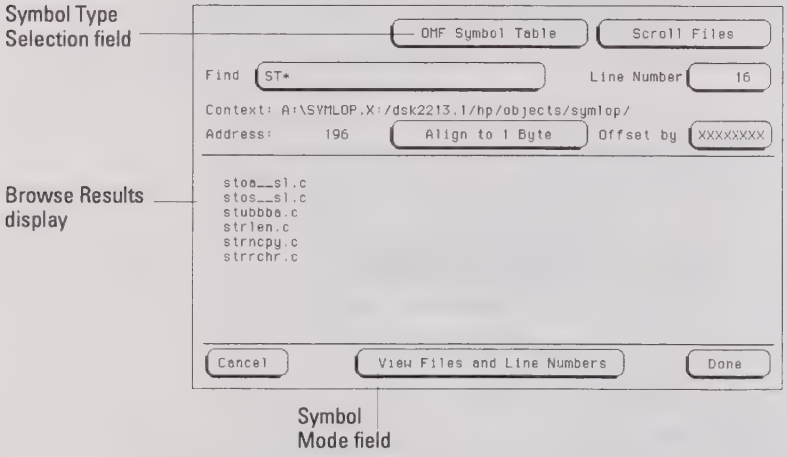

These are the OMF Symbol Browser areas you can access:

- Symbol Type Selection field (user or OMF)
- Find field
- Context display
- Address display
- Align to xx Byte option
- Offset option
- Browse Results display
- Symbol Mode field

Symbol Type Selection field (user vs. OMF)

This field lets you choose between the two types of symbols available in the logic analyzer:

- User Symbols correspond to the symbols that you can define in the Format menu.
- OMF Symbols correspond to the symbols in an OMF symbol file that you loaded using the Symbol Utility.

This field appears at the top of the pop-up menu when you select a trigger term.

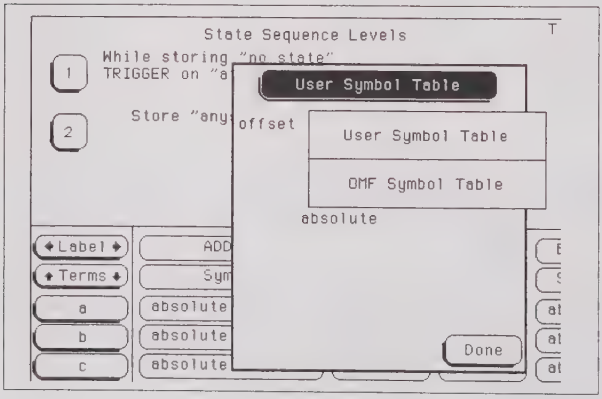

Find field

Use this field to locate particular symbols in the symbol databases that you want to use in a trigger specification. When you first access the OMF Symbol Table menu, the **Find** field will display an asterisk (*). Use the asterisk wildcard character to browse the symbol database for the symbol you want. To begin using this field, select it and type in the name of a file or symbol. Then, select **Done**. When you do this, the system searches the symbol database for symbols that match this name.

Asterisk wildcard (*)

The asterisk wildcard represents "any characters." When you search a symbol database using just the asterisk, you will see a list of all symbols in the database. You can also add an asterisk to a search word to find all symbols that begin or end with the same letters.

Example

To find all of the symbols that begin with the letters "st", select the **Find** field and type "st*". Select **Done** and the browse results will look like this:

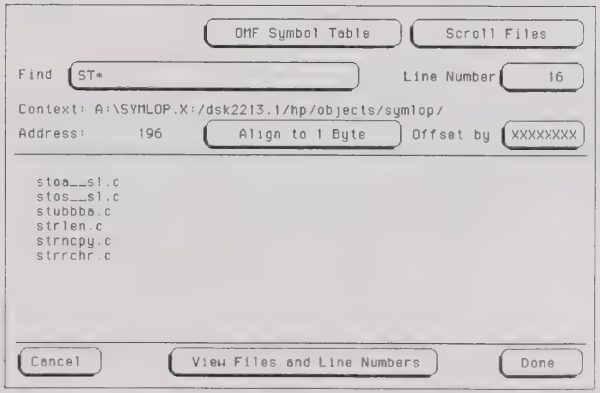

Now you can highlight the symbol that you want and select **Done** to use the symbol as a trigger term.

Question mark wildcard (?)

If you are using a keyboard to control your logic analyzer, you can use the question mark wildcard character. A question mark represents "any single character." You can use more than one question mark in a symbol database search; for example, "?ector?num" is a valid search string.

Example

Your symbol database contains many symbols that have names such as "sym1", "sym17", and "sym20". To find all of the symbols that end in "5", select the **Find** field and type "sym?5". Select **Done** and the browse results will look like this:

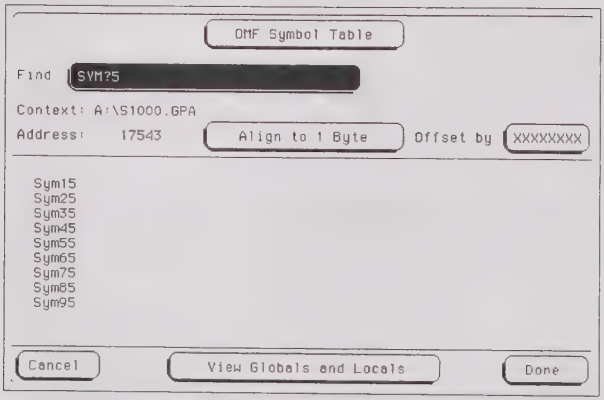

Notice that "sym5" is not matched. Now you can highlight the symbol that you want and select **Done** to use the symbol as a trigger term.

Browse Results display

This part of the Symbol Browser menu lists the symbols that satisfy the search criteria specified in the **Find** field. You can scroll this field to view symbols that are off the screen.

Scroll Files field

This field appears if the symbol mode field, at the bottom of the screen, is set to "View Files and Line Numbers". Select this field to scroll the listing of the browse results. When the **Scroll Files** field is not selected, you can scroll the **Line Number** field.

Align to xx Byte option

Use the **Align to Byte** option to mask off an address. Most processors do not fetch instructions from memory on byte boundaries. To trigger a logic analyzer on a symbol at an odd-numbered address, you must mask off the address.

Example

The symbol "main" occurs at address 100F. The processor being probed is a 68040, which fetches instructions on long-word (4-byte) boundaries. To trigger on the address 100F, the address must be masked off to the nearest 4-byte boundary. The **Align to Byte** option would be set to "Align to 4 bytes". The Symbol Utility masks the address of the symbol "main" to 100C hex before it is used as a trigger term.

Offset option

Use the **Offset** option to add an offset value to the starting point of the symbol that you want to use as a trigger term. You might do this to trigger on a point in a function that is beyond the preamble of the function, or to trigger on a point that is past the prefetch depth of the processor. Setting an offset helps avoid false triggers in these situations.

The offset specified in the **Offset by** field is applied before the **Align to xx Byte** option masks the address.

Example

An 80386 processor has a prefetch depth of 16 bytes. Functions func1 and func2 are adjacent to each other in physical memory, with func2 following func1.

To trigger on func2, without getting a false trigger from a prefetch beyond the end of func1, add an offset value that is equal to or greater than the prefetch depth of the processor to your trigger term. In this case, you want to add an offset of 16 bytes, so you would set the value of the **Offset by** field to 10 hex. When you specify func2 as your trigger term, the logic analyzer will trigger on address func2+10.

Context display

The Context display, just below the **Find** field, indicates the original OMF source file for the symbol that is currently highlighted in the Browse Results display. "A:" indicates the logic analyzer flexible disk drive. "C:" indicates the logic analyzer hard disk drive.

Some OMF formats, such as IEEE-695, provide information about the path name of the original source files. If you are using one of these OMF formats, you will see path information for the individual files in the browse results display. A colon separates the source file path from the OMF path by a colon.

Example

An OMF file called symlop.x was loaded from the hard disk drive of the logic analyzer. One of the source files for the OMF is called main.c. When you browse symbols from the symbol database, the context display might look like this:

```
Context: C:\symlop.x:/users/fred/project/src/main.c
```

C:\symlop.x is the path for the OMF file on the logic analyzer hard disk. The path /users/fred... applies to the file main.c in the original environment where it was compiled.

Address display

The Address display indicates the address corresponding to the symbol that is currently highlighted in the Browse Results display. The addresses are displayed as physical values. Intel 80x86 segment:offset values are converted to physical address values before they are displayed.

Symbol Mode field

You can view OMF symbols in one of two formats:

- Global and local variables
- Source file names with line numbers

Select the large field at the bottom of the menu to toggle between the two modes. Symbols appear in trace listings in the selected format.

When you select the **`View Globals and Locals`** mode, the browse results display as symbolic names. When you select the **`View Files and Line Numbers`** mode, the browse results display lists source file names from the OMF file.

In the **`View Files and Line Numbers`** mode, the following two additional fields appear in the OMF Symbol Browser menu.

Scroll Files field

Select this field to scroll the Browse Results listing.

Line Number field

Use this field to select a source file line number as a trigger term. Select the field once to scroll through the line numbers of valid, existing lines of code. Select the field a second time, and a keypad pop-up menu lets you specify a particular line number.

Not all lines in a source file have associated code. When you type in a line number that does not contain code, the field defaults to the next highest line number that does contain code. If you select a line number that is higher than any line number in the file, the field defaults to the highest line number in the file.

The Symbol Utility supports the following OMF file formats.

HP-MRI IEEE-695 This OMF is produced by HP and MRI cross-compilers and cross-assemblers. This format is fully supported by the Symbol Utility IEEE-695 reader.

IEEE-695 This OMF is usually produced by language tools for non-Intel microprocessors. Some language tools that claim to output this format may deviate from the IEEE-695 standard in ways that make the OMF file unreadable by the Symbol Utility reader.

OMF86 This OMF is produced by language tools for Intel 80x86 series and Pentium microprocessors running in real mode only.

OMF286 This OMF is produced by language tools for Intel 80x86 series and Pentium microprocessors running in real and/or protected mode. The supported OMF286 file types are *Single-task Loadable* and *Bootloadable*.

OMF386 This OMF is produced by language tools for Intel 80x86 series and Pentium microprocessors running in real and/or protected mode. The supported OMF386 file types are *Loadable* and *Bootloadable*.

TI-COFF This OMF is produced by language tools for Texas Instruments microprocessors.

GPA This is the General-Purpose ASCII file format, which can be used to provide symbols for an Object Module Format that is not explicitly supported. See the "General-Purpose ASCII Symbol File Format" section in this chapter for more information.

ELF/DWARF This OMF is a portable format consisting of the ELF (Executable and Linkable Format) and the DWARF (Debugging Information Format) for various processors, including Intel 80960, PowerPC, and MIPS.

The Symbol Utility supports a General-Purpose ASCII (GPA) symbol file format. If your software development tools do not produce OMFx86 or IEEE-695 files, you can create a GPA file. You can also use a GPA file to define additional symbols that may not be included in an OMFx86 or IEEE-695 file.

Various kinds of symbols are defined in different records in the GPA file. Record headers are enclosed in square brackets; for example, [VARIABLES]. For a summary of GPA file records and associated symbol definition syntax, refer to the following GPA Record Format Summary.

For more detailed descriptions of GPA file records and associated symbol definition syntax, refer to these topics in this chapter:

- SECTIONS
- FUNCTIONS
- VARIABLES
- SOURCE LINES
- START ADDRESS
- Comments

GPA Record Format Summary

Format

```
[SECTIONS]
section_name  start..end  attribute

[FUNCTIONS]
func_name  start..end

[VARIABLES]
var_name   start [size]
var_name   start..end

[SOURCE LINES]
File: file_name
line#  address

[START ADDRESS]
address

#Comments
```

If no record header is specified, [VARIABLES] is assumed. Lines without a preceding header are assumed to be symbol definitions in one of the VARIABLES formats.

Example

This is an example GPA file that contains several different kinds of records:

```
[SECTIONS]
prog     00001000..0000101F
data     40002000..40009FFF
common   FFFF0000..FFFF1000

[FUNCTIONS]
main     00001000..00001009
test     00001010..0000101F

[VARIABLES]
total    40002000  4
value    40008000  4
```

```
[SOURCE LINES]
File: main.c
10        00001000
11        00001002
14        0000100A
22        0000101E

File: test.c
 5        00001010
 7        00001012
11        0000101A
```

SECTIONS

Format

```
[SECTIONS]
section_name  start..end  attribute
```

Use SECTIONS to define symbols for regions of memory, such as sections, segments, or classes.

`section_name` A symbol representing the name of the section.

`start` The first address of the section, in hexadecimal.

`end` The last address of the section, in hexadecimal.

`attribute` This is optional, and may be one of the following:

NORMAL (default)—The section is a normal, relocatable section, such as code or data.

NONRELOC—The section contains variables or code that cannot be relocated; this is an absolute segment.

Enable Section Relocation

To enable section relocation, section definitions must appear before any other definitions in the file.

Example

```
[SECTIONS]
prog            00001000..00001FFF
data            00002000..00003FFF
display_io      00008000..0000801F  NONRELOC
```

If you use section definitions in a GPA symbol file, any subsequent function or variable definitions must be within the address ranges of one of the defined sections. The Symbol Utility ignores functions and variables that are not within the range.

FUNCTIONS

Format

```
[FUNCTIONS]
func_name  start..end
```

Use FUNCTIONS to define symbols for program functions, procedures, or subroutines.

`func_name` A symbol representing the function name.

`start` The first address of the function, in hexadecimal.

`end` The last address of the function, in hexadecimal.

Example

```
[FUNCTIONS]
main      00001000..00001009
test      00001010..0000101F
```

VARIABLES

Format

```
[VARIABLES]
var_name   start [size]
var_name   start..end
```

You can specify symbols for variables either by using the address of the variable, the address and the size of the variable, or a range of addresses occupied by the variable. If you specify only the address of a variable, the size is assumed to be one byte.

`var_name` A symbol representing the variable name.

`start` The first address of the variable, in hexadecimal.

`end` The last address of the variable, in hexadecimal.

`size` This is optional, and indicates the size of the variable, in bytes, in decimal.

Example

```
[VARIABLES]
subtotal     40002000   4
total        40002004   4
data_array   40003000..4000302F
status_char  40002345
```

SOURCE LINES

Format

```
[SOURCE LINES]
File: file_name
line#  address
```

Use SOURCE LINES to associate addresses with lines in your source files.

`file_name` The name of a file.

`line#` The number of a line in the file, in decimal.

`address` The address of the source line, in hexadecimal.

Example

```
[SOURCE LINES]
File: main.c
10       00001000
11       00001002
14       0000100A
22       0000101E
```

START ADDRESS

Format

```
[START ADDRESS]
address
```

`address` The address of the program entry point, in hexadecimal.

Example

```
[START ADDRESS]
00001000
```

Comments

Format

```
#comment text
```

Use the # character to include comments in a file. The Symbol Utility ignores any text following the # character. You can put comments on a line alone or on the same line following a symbol entry.

Example

```
#This is a comment.
```

This section describes messages that can appear when using the Software Analyzer.

Logic Analyzer disk full

Before you can download the file, you must recover logic analyzer disk space by purging unneeded files.

Logic Analyzer is already connected to a remote host

Only one remote interface may control a logic analyzer at a time.

This error also occurs when someone is accessing the logic analyzer file system as the "control user," or using telnet to access the logic analyzer command parser socket. The Software Analyzer must access the logic analyzer as the control user; there can only be one control user at any time.

The logic analyzer file system can be accessed by multiple "data users" if read-only access is required. Refer to the appropriate logic analyzer User's Guide for more information.

Bad transport type: <transport> (PCs with Windows 3.1 only)

A bad transport name was specified with the Software Analyzer "-t" command line option. The "transport" type can be HP-ARPA, MS-TCP/IP, Novell-WP, or PC-NFS. The transport types can be specified in upper- or lower-case characters, and only a significant number of characters are required. For example, "m", "ms-tcp", and "MS-TCP/IP" are all equivalent.

Cannot allocate additional memory

The Software Analyzer cannot acquire the memory it needs.

Cannot open file: <file>

The specified local file could not be found.

Communications error: <description>

This is a fatal communications error. The description tells you more about the cause of the problem.

Communications timed out

The connection timeout elapsed before the logic analyzer accepted the connection. See "If you have LAN connection problems" in the Common Problems chapter.

Empty directory name

An invalid source directory name was given in the Source Lookup Failure dialog.

Lost LAN connection

The established LAN connection was lost during a session. This happens if the logic analyzer is powered off or if the network goes down.

Networking DLL file <dll_name> not found (PCs with Windows 3.1 only)

Check your network configuration and PATH environment variable. There may be a mismatch between your configured PC networking and the Network Protocol selected in the LAN Connection dialog box. Refer to "If you have LAN connection problems" in the Common Problems chapter for further information.

No ADDR label defined

The **`Next Line`** or **`Prev Line`** button was pressed in an analyzer without an ADDR label. The most common cause is that the preprocessor configuration is not loaded.

No destination file

You must specify a logic analyzer filename for the file download.

No internet address for <IP address>

Make sure the specified Internet Address is valid. If you are using the analyzer's name, make sure it is found in the "hosts" file or by the name server.

No source file

You must specify a local file for the download.

No source references found

The **`Next Line`** or **`Prev Line`** button was pressed, and no source line references were found between the current trace data state and the end (or beginning) of the trace data.

Unable to load logic analyzer fonts

The logic analyzer fonts could not be loaded for one of these reasons.

- On a personal computer, the fonts were not accepted by the video driver. Verify whether a patch exists for the video driver.
- On a UNIX workstation, the fonts could not be found in the X server font path. See the Common Problems chapter.

In addition, alternate fonts could not be loaded.

Unable to load logic analyzer fonts - using alternate fonts

The logic analyzer fonts could not be loaded for the same reason as the previous message. An alternate font that allows the product to run was loaded, but it may display inappropriate characters on some logic analyzer menus.

X Server is X11R4, not X11R5; the Logic Analyzer window may not render properly (HP 9000/700 only)

Some older (X11R4) X servers have a variety of problems displaying the Logic Analyzer window, including displaying unusual colors, or only showing part of the screen. The Software Analyzer requires an X11R5 server.

Common Problems

Common Problems

This chapter describes common problems that can occur when using the Software Analyzer, and some recommended solutions. These topics are discussed:

- If your logic analyzer is "in use"
- If you have LAN connection problems
- If you have alternate or missing fonts (Motif)
- If there are no symbols in the Listing menu
- If there is no source code in the Trace List Source window
- If Trace List Source navigation operates illogically
- If source and listing line numbers are different
- If Next Line/Prev Line operations take a long time

If your logic analyzer is "in use"

When you try to connect to a logic analyzer that is being used by someone else, a dialog box will appear and report the user connected to it.

- If the user is "High-Speed@remote", the logic analyzer communication channel is set to High-Speed SCSI instead of Ethernet.
- If the user is "HP-IB@remote", the logic analyzer communication channel is set to HP-IB instead of Ethernet.
- If the user is "user@<ip_address>", the logic analyzer is connected to another computer; <ip_address> is the LAN address of the connected computer.

☐ Select **`Cancel`** to cancel the connection attempt. Select **`Unlock`** to disconnect the previous user from the logic analyzer. Select **`Connect`** to disconnect the previous user, then attempt your connection again.

Disconnect an Existing User

Select either "Unlock" or "Connect" to immediately disconnect the previous user from the logic analyzer.

If you have LAN connection problems

☐ If you are using a personal computer, verify that your PC network is working correctly. Try these methods:

```
ping <another_computer_on_your_network>
```

```
ftp <another_computer_on_your_network>
```

Because the Windows network is required to run this product, verify your Windows network configuration. Most networking packages install a Windows network device driver in the SYSTEM.INI file. If this is not done correctly, DOS-mode applications may run successfully, but the product will still fail under Windows.

☐ Verify your logic analyzer network configuration.

1 Try to "ping" the logic analyzer from your computer:

```
ping <hostname or IP_address>
```

2 If the logic analyzer does not respond to a "ping", you need to verify its Internet (IP) Address. To do this, look at the logic analyzer Ethernet Communication configuration settings from the System Configuration screen on the HP 16500, or the LAN settings in the System External I/O menu on the HP 1660-Series or HP 1670A-Series logic analyzers.

The Ethernet configuration options (and example values) are:

```
Ether Address: 080009622842 (not configurable)
Analyzer name: LP16500B
Internet Address (IP): 15.6.253.106
Advanced Configuration
   Gateway Address: 15.6.248.1
   File Timeout: 1.5 s
   Subnet Mask: 255.255.248.0 (set automatically)
```

☐ If you are using a personal computer running MS Windows 3.1, verify your network with the list of supported networks.

In the LAN Connection dialog, you can select the following Network Protocols:

MS-TCP/IP [WINSOCK 1.1]	This is the Microsoft TCP/IP networking package which is distributed by Microsoft for Lan Manager and Windows For Workgroups.
PC-NFS [WINSOCK 1.1]	This is the SunSelect PC-NFS networking package. You must install the Windows portion of this package to run this product. See the *PC-NFS Installation Guide* for more information.
Novell-WP	This is the Novell Lan Workplace for DOS. It is the only supported Novell networking package. Novell Netware is NOT supported.
HP-ARPA	This is the Hewlett-Packard TCP/IP networking package.

☐ If your networking package is *not* on this list, but it supports the Windows Sockets (Open Interface for Network Programming under Microsoft Windows) Version 1.1, choose the MS-TCP/IP [WINSOCK 1.1] network protocol. Because Windows Sockets is an open interface, this product *does not* guarantee functionality with all packages that claim to be compatible with Windows Sockets. You may try to operate this product at your own risk.

If you have alternate or missing fonts (Motif)

If the logic analyzer fonts for X/Motif have not been properly set up for your X server, you will see one of the following warning messages when you connect to a logic analyzer:

```
Unable to load Logic Analyzer fonts - using alternate fonts
Unable to load Logic Analyzer fonts
```

In the first case, you should still see text, but some of the characters on the logic analyzer Format or Configuration screens will not be displayed correctly. In the second case, when working on a PC, you will see no text in the logic analyzer window at all. In the second case, when working in X-Windows, you may see some changes in the arrows and activity bars.

☐ **If your X server runs on the same computer as the Software Analyzer application, set the font path using the "xset" command from your shell prompt:**

```
/usr/bin/X11/xset +fp <install_root>/<platform>/lib/gsbpp
```

For example, if you installed the Software Analyzer in the default location (/usr/hpcol) on an HP 9000/700 workstation (hp700_9), the command would be:

```
/usr/bin/X11/xset +fp /usr/hpcol/hp700_9/lib/gsbpp
```

If you are using an HP 9000/700 workstation with the HP VUE window manager, you may add the appropriate "xset" command to the /usr/vue/config/Xstartup shell script to set the font path automatically each time you start the X server. If you start X via the "x11start" script, you can place the "xset" command in your $HOME/.x11start file.

On Sun workstations, you should run the <install_root>/<platform>/configure script to set up the logic analyzer font files. For more information, refer to the "Installing the Software Analyzer (SunOS)" and "Installing the Software Analyzer (Solaris)" sections in the Installation chapter.

☐ **If you are using an X terminal, or are using the Software Analyzer through a remote X server connection, read the following.**

It is important to note that the font path (and the fonts themselves) must be available to the X server to which your display is connected, and not on the workstation where the Software Analyzer application is run.

You may either NFS-mount the workstation that has the logic analyzer fonts installed and issue an "xset" command to add that directory to your font path (see the previous checkbox), or copy the logic analyzer fonts onto your local file system and add them to your font path from there.

For example, on an HP 9000 Series 700 workstation, you could use the following commands:

```
[NFS-mount the file system where the Software Analyzer is
installed]

mkdir /users/guest/fonts
cd /users/guest/fonts
cp /nfs/remotehost/usr/hpcol/hp700_9/lib/gsbpp/*.scf .
/usr/bin/X11/mkfontdir
/usr/bin/X11/xset +fp /users/guest/fonts
```

If your X server still does not display the logic analyzer fonts, you may need to convert them for your particular X server. For example:

```
cd /users/guest/fonts
rm *.scf
cp /nfs/remotehost/usr/hpcol/hp700_9/lib/gsbpp/*.bdf .
/usr/bin/X11/bdftosnf sm165.bdf > sm165.snf
/usr/bin/X11/bdftosnf lg165.bdf > lg165.snf
/usr/bin/X11/mkfontdir
/usr/bin/X11/xset +fp /users/guest/fonts
```

If there are no symbols in the Listing menu

☐ **Make sure the Symbol Utility is present.**

The Symbol Utility is shipped with the Software Analyzer.

If the Symbol Utility is loaded on an HP 16500B logic analyzer, a green box appears in the "Options" box in the System Configuration menu. This is the first menu you see when you power up the HP 16500.

If the Symbol Utility is loaded on an HP 1660C/CS-series or HP 1670A-series logic analyzer, a grey box appears in the bottom leftmost box in the External I/O menu. Go to the External I/O menu.

The logic analyzer has the ability to load only two "Options". If you see that two options are loaded and the Symbol Utility is not one of them, you must remove one of the options and reboot the logic analyzer.

1. To remove an option, go to the System Hard Disk menu and change to the C:\SYSTEM directory.
2. Option boot files begin with "OPT_". The Symbol Utility boot file is OPT_032 for HP 16500B, and OPTC_032 for the HP 1660C/CS-Series and HP 1670A-Series. Rename one of the other option boot files.

☐ **Make sure an OMF file is loaded into the desired label for the correct module and machine.**

The Symbol Utility can load a symbol file into any existing label of any module and machine present in the logic analyzer.

1. To determine how the symbol file was loaded, go to the OMF Symbol Table menu in the Symbol Utility and select "Current Loaded Files".
2. You will see which symbol files have been loaded into which module/machine, and the label to which the symbols are mapped. This will usually be the ADDR label.

If there is no source code in the Trace List Source window

To make the Trace List Source window track the Listing menu, you must take the following actions.

- ☐ Make sure the Symbol Utility is present (see "If there are no symbols in the Listing menu").

- ☐ Make sure an ADDR label is turned on in the module and machine.

  The Software Analyzer Trace List Source window tracks the center state in the Listing menu according to the source line reference associated with the analyzer's ADDR label. The ADDR label must be present in the module and machine for which you want source line referencing to work.

  1. To verify that an ADDR label is turned on, go to the Format menu and look for "ADDR" in the list of labels. If there is no ADDR label, you may not have loaded the correct configuration file.
  2. Note that the ADDR label does not need to be present in the Listing menu. It just needs to exist in the Format menu. Also, if the ADDR label is present in the Listing menu, it can be displayed in any base—binary, hex, symbol, etc.

- ☐ Make sure an OMF file is loaded into the ADDR label for the correct module and machine.

  The Symbol Utility can load a symbol file into any existing label of any module and machine present in the logic analyzer.

  1. To determine how the symbol file was loaded, go to the OMF Symbol Table menu in the Symbol Utility and select "Current Loaded Files".
  2. Verify that the proper symbol file was loaded into the correct analyzer and machine, and that it was loaded into the ADDR label.

  If you are using more than one analyzer module, it is very easy to load the symbol file into the wrong module by mistake. Before you select **Load**, make sure you have selected the correct module and machine.

☐ **Make sure the Software Analyzer is able to access the source code files.**

The Trace List Source window attempts to display the source file that corresponds to the center state of the Listing menu. First, it looks in the location given by the OMF file. Then, it searches the list of directories in the Source View Settings dialog. If the file is not found, a dialog prompts you to enter the name of the directory that contains the source file.

☐ **Make sure the loaded OMF file has source line information in it.**

Source line information in an OMF file normally consists of a list of line numbers and corresponding addresses. The Software Analyzer uses this information to make the Trace List Source window track the center state in the Listing menu. You must compile and link the executable program with the appropriate debug options so that the resulting OMF file contains source line information.

An easy way to determine whether or not the OMF file has source line information is to load it using the Symbol Utility.

1. Go to the Symbol Utility OMF Symbol Table menu and load the OMF file into a module.
2. Go to the Trigger menu for the module.
3. In the list of Terms, set the base of the label in which you loaded the OMF file to "Symbol".
4. Select a term under that label and change to "OMF Symbol Table".
5. Change the view to "View Files and Line Numbers". If there are no files in the list, or if you scroll through the list and the Address for each file is "No Address", there is no source line information in the OMF file.

If Trace List Source navigation operates illogically

When scrolling the Listing menu or using the Trace List Control buttons, you may see the highlighted line in the Trace List Source window move in an illogical manner. For example, as you move through the listing, the highlighted line may go to a line with a function call, then to the line after the function call, and finally to the source code in the function itself. Or, as you move through the listing, the highlighted line goes over both branches of an if-then-else statement.

This behavior is caused by a microprocessor instruction prefetch. Many microprocessors perform instruction prefetch. Prefetch means the microprocessor reads several instructions from memory ahead of the instructions that are executing. Prefetched instructions may or may not be executed, depending on the flow of the program.

The disassembler in the logic analyzer attempts to determine which instructions have been executed and which have not. If the disassembler has state suppression capability, you can suppress the states containing unexecuted instructions by selecting the appropriate menu item in the Invasm Options menu. When you suppress these states, the code flow viewed in the Trace List Source window is much more reasonable.

However, often heuristic algorithms must be applied to determine which states contain unexecuted instructions. For some microprocessors, this is not perfectly reliable. Therefore, unexecuted instructions may still appear in the Listing even though these states are supposed to be suppressed (as specified in the Invasm Options menu).

If source and listing line numbers are different

Certain circumstances can cause the highlighted line in the Trace List Source window to not match the line number in the listing menu.

The file and line number shown under the ADDR label is a result of an address lookup using the exact address shown there. The address used to place the highlighted line in the Trace List Source window is a combination of the address under the ADDR label and any extra address bytes shown under the DATA label.

The extra address bytes under the DATA label are present only when the DATA label is displayed in the Invasm base and is present on the screen. These characters always appear in the first two columns in the DATA label.

By combining the extra address characters with the address shown in the ADDR label, a more precise address can be obtained. This derived address may result in a source line reference that differs from the raw address.

If Next Line/Prev Line operations take a long time

After selecting one of the Trace List Control buttons, several seconds to several minutes can elapse before the highlighted line in the Trace List Source window moves to the appropriate line.

This elapsed time can occur when several suppressed states have corresponding source lines references. If the suppressed states do not have source line references, for example if they are data reads or writes, this problem probably will not occur. When states with source line references are suppressed, the logic analyzer takes much longer to reposition the Listing menu.

The amount of elapsed time depends on the disassembler used, the number of suppressed states with source line references, and the number of source line references in the symbol database.

Installation

Installation

This chapter shows you how to install the HP B3740A Software Analyzer and other required software. These topics are discussed:

- Installing the Software Analyzer (MS Windows)
- Installing the Software Analyzer (HP 9000/700)
- Installing the Software Analyzer (SunOS)
- Installing the Software Analyzer (Solaris)
- Installing the Logic Analyzer Software
- Installing the Symbol Utility Software

Installing the Software Analyzer (MS Windows)

To install the Software Analyzer on personal computers running MS Windows, you will take the following steps:

- Step 1. Install Win32s.
- Step 2. Install the Software Analyzer

Step 1. Install Win32s

This step is only necessary if your PC is running Windows 3.1.

Before installing the Software Analyzer, you must install the Win32s libraries from the Microsoft Win32s Setup disks which are included with the Software Analyzer.

The Software Analyzer is a Microsoft Windows 32-bit application. To run 32-bit applications under MS Windows 3.1, the Win32s support libraries from Microsoft must be installed on your system.

The Software Analyzer requires Win32s version 1.1 or later.

1 Start MS Windows in the 386-enhanced mode.

2 Insert the Microsoft Win32s Setup disk into floppy disk drive A: or B:.

3 Choose the File→Run... command in the Windows Program Manager. Enter "a:\setup" (or "b:\setup" if you installed the floppy disk in drive B:) in the Command Line text box.

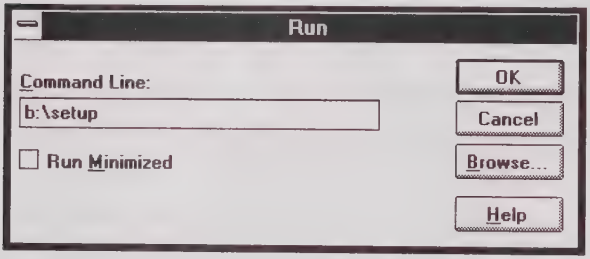

4 Click on the OK button. Then, follow the instructions on the screen.

The Win32s setup will ask you to add SHARE.EXE to your AUTOEXEC.BAT file. The Software Analyzer does not require you to run SHARE.EXE, but you may do so if you want.

Step 2. Install the Software Analyzer

1 Start MS Windows in the 386 enhanced mode.

2 Insert the Software Analyzer system disk in floppy disk drive A: or B:.

3 Choose the File→Run... command in the Windows Program Manager. Enter "a:\setup" (or "b:\setup" if you installed the floppy disk in drive B:) in the Command Line text box.

4 Click on the OK button. Then, follow the instructions on the screen.

This section shows you how to install the Software Analyzer on HP 9000 Series 700 computers running the HP-UX operating system.

The Software Analyzer requires:

- 6 Mbytes of hard disk space
- HP-UX version 9.0 or greater
- Motif 1.2
- X11R5 X Window System or HP VUE

Refer to your HP-UX documentation for instructions on installing software (see the section on updating HP-UX). To install the software, take the following steps:

1 Become the root user on the system you want to update.

2 Make sure the tape write-protect screw points to SAFE.

3 Put the product media in the tape drive that will be the *source device* for the update process.

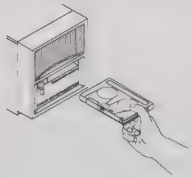

4 Confirm that the tape drive BUSY and PROTECT lights are on. If the PROTECT light is not on, remove the tape and confirm the position of the write-protect screw. If the BUSY light is not on, check that the tape is installed correctly in the drive and that the drive is operating correctly.

5 When the BUSY light goes off and stays off, at the HP-UX prompt start the update program by typing:

```
/etc/update
```

6 When the HP-UX update utility main screen appears, confirm that the source and destination devices are correct for your system. Refer to your HP-UX documentation (see the section on updating HP-UX) if you need to modify these values.

7 Choose "Select All Filesets on the Source Media" when your source and destination directories are correct.

8 To begin the update, press the softkey <Select Item>. At the next menu, press the softkey <Select Item> again. Answer the last prompt with "y".

It takes several minutes to read the tape.

9 When the installation is complete, read /tmp/update.log to see the results of the update.

10 Add "/usr/hpcol/hp700_9/bin" to your PATH environment variable.

11 To allow your X server to find the logic analyzer fonts, at the HP-UX prompt type:

```
/usr/bin/X11/xset +fp /usr/hpcol/hp700_9/lib/gsbpp
```

If you are using the HP VUE window manager, you may add the "xset" command to the /usr/vue/config/Xstartup script to set up the font path each time the X server is started. If you are not using VUE, you may add it to your $HOME/.profile file.

System Requirements

This software is designed to run on a Sun SPARCsystem with SunOS version 4.1.3 or 4.1.3_U1 and OpenWindows 3.0. The tape uses the QIC-24 data format. Your system must have 8 Mbytes of free disk space to store this software

To install the Software Analyzer on Sun workstations running the SunOS operating system, you will take the following steps:

- Step 1. Mount the tape.
- Step 2. Install the software.
- Step 3. Run the configure script (if necessary).
- Step 4. Install a SunOS patch.
- Step 5. Set the PATH environment variable.

Step 1. Mount the tape

1 Verify what kind of tape drive you have to see if it can read QIC-24 tapes by typing:

```
mt -f <tape_device_name> status
```

QIC-150 (Archive Viper), Emulex MT-02, and Sysgen SC4000 tape drives can read QIC-24 tapes. The 4-track QIC-11 tape drives cannot read 9-track QIC-24 tapes.

2 If your tape drive cannot read QIC-24 tapes, stop now and find another tape drive.

3 Verify that the HP B3740A tape write-protect screw points to SAFE.

4 Insert the tape in the tape drive, and slide the lever on the tape drive to the right.

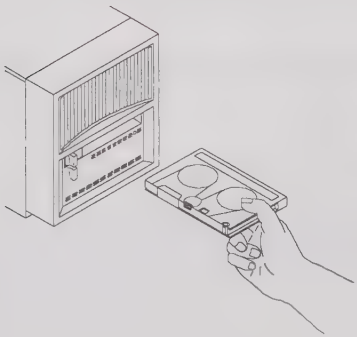

Step 2. Install the software

1 Log in as root.

2 If the *tape drive is on your local system*, extract the swa_install script from the tape by typing:

```
umask 0
tar xvfbp <device> 20 swa_install
```

3 If you are installing the software from a *tape drive on a remote system*, extract the swa_install script from the tape by typing:

```
rsh -n <hostname> "dd if=<device> bs=20b" |
   tar xvfbp - 20 swa_install
```

<*device*> is the name of your tape device.
<*hostname*> is the name of the system with the tape drive.

4 Install the software by typing "./swa_install".

The swa_install script will request the following:

- Device name of your tape device

  Enter the same <*device*> as above.

- Operating system for which you are installing the software

  Select the operating system used by the workstation which will run the Software Analyzer.

- Directory where you want the software to be installed

After you have answered the questions, swa_install will install the appropriate software on your hard drive, then run the configure script to perform the setup required to run the Software Analyzer. If configure succeeds, *and* if you will operate the Software Analyzer only on the workstation where it was installed, skip to Step 4, "Install a SunOS patch." If configure fails, fix the indicated problem and go to Step 3, "Run the configure script."

Step 3. Run the configure script

If the swa_install script succeeded in Step 2, skip to Step 4.

- **To run the configure script, change to the directory named usr/hpcol/sunos_4 by typing:**

```
cd usr/hpcol/sunos_4
./configure
```

You should run the standalone configure script on the workstation where you originally installed the Software Analyzer, *and* on each workstation that NFS mounts the usr/hpcol install tree (and has a local file system). You may run the configure script as root at any time to verify that all files required by the Software Analyzer are linked to the correct locations on the local file system.

The configure script does the following:

- Installs the XKeysymDB file if the required OSF key mappings do not exist in $OPENWINHOME/lib/XKeysymDB.
- Installs two logic analyzer fonts in the $OPENWINHOME/lib/fonts directory.

$OPENWINHOME is /usr/openwin by default.

Example

Assume the HP B3740A Software Analyzer was installed on the file server *apple_tree* in the directory */home/apple_tree*.

There are seven workstations that want to share the apple_tree HP B3740A install directory. To share this directory, you must do the following for each workstation:

1 Log in to the workstation system as root.

2 Mount the apple_tree HP B3740A install directory by typing:

```
mount apple_tree:/home/apple_tree/usr/hpcol /usr/hpcol
```

3 Change to the directory /usr/hpcol/sunos_4, and run the configure script to link the necessary HP B3740A files onto your local file system. The configure script is verbose and will tell you which files failed to link. Follow the instructions given by the configure script, and continue to run it until it succeeds.

```
cd /usr/hpcol/sunos_4
./configure
```

Step 4. Install a SunOS patch

If you have SunOS version 4.1.3_U1, you *do not* have to install this patch. The HP B3740A Software Analyzer redistributes a SunOS patch that you must install before you can use the Software Analyzer. Patch 100257-05, the "Jumbo ld patch", fixes dynamic loader defects.

This patch is located in the /usr/hpcol/sunos_4/patch_dir/<patch_number> directory.

1 Check with your system administrator to see if the SunOS patch has been installed. If it has, skip to Step 5, "Set the path environment variable."

2 If the patch has not been installed, type the following commands to change to the appropriate patch directory and view the README file:

```
cd /usr/hpcol/sunos_4/patch_dir/<patch_number>
cat README
```

3 Carefully follow the directions in the README file.

CAUTION

When installing the 100257-05 patch (specifically when installing the new /usr/lib/ld.so library) follow the instructions in the README file precisely. Make sure to log in as root, and check your SunOS revision by typing "uname -r" to ensure that the correct version of ld.so is being installed.

Install the Patch on Each Workstation

You must install this patch on each Sun workstation that will run the Software Analyzer.

Step 5. Set the PATH environment variable

1 Set the PATH environment variable to include the /usr/hpcol/sunos_4/bin directory.

If you are using "csh", the syntax is:

```
setenv PATH ${PATH}:/usr/hpcol/sunos_4/bin
```

If you are using "sh" or "ksh", the syntax is:

```
PATH=${PATH}:/usr/hpcol/sunos_4/bin
export PATH
```

2 After setting the PATH, type "swa" to start the Software Analyzer.

System Requirements

The Software Analyzer software is designed to run on a Sun SPARCsystem with SunOS version 5.3 (Solaris 2.3) or greater. The tape uses the QIC-24 data format.

In addition, your system must have:

- 8 Mbytes of free disk space
- OpenWindows version 3.0 or greater
- OpenWindows non-essential MIT core clients (package SUNWowMIT)
- OpenWindows optional fonts (package SUNWowoft)
- SunSoft OSF/Motif version 1.2.2 or greater

To install the Software Analyzer on Sun workstations running the Solaris operating system, you will take the following steps:

- Step 1. Mount the tape.
- Step 2. Install the software.
- Step 3. Run the configure script (if necessary).
- Step 4. Set the PATH environment variable.

Step 1. Mount the tape

1 Verify what kind of tape drive you have to see if it can read QIC-24 tapes by typing:

```
mt -f <tape_device_name> status
```

QIC-150 (Archive Viper), Emulex MT-02, and Sysgen SC4000 tape drives can read QIC-24 tapes. The 4-track QIC-11 tape drives cannot read 9-track QIC-24 tapes.

2 If your tape drive cannot read QIC-24 tapes, stop now and find another tape drive.

3 Verify the HP B3740A tape write-protect screw points to SAFE.

4 Insert the tape in the tape drive, and slide the lever on the tape drive to the right.

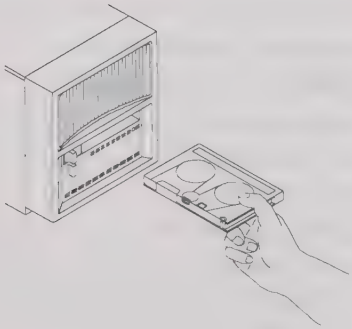

Step 2. Install the software

1 Log in as root.

2 If the *tape drive is on your local system*, extract the swa_install script from the tape by typing:

```
umask 0
tar xvfbp <device> 20 swa_install
```

3 If you are installing the software from a *tape drive on a remote system*, extract the swa_install script from the tape by typing:

```
rsh -n <hostname> "dd if=<device> bs=20b" |
   tar xvfbp - 20 swa_install
```

<device> is the name of your tape device.
<hostname> is the name of the system with the tape drive.

4 Install the software by typing "./swa_install".

The swa_install script will request the following:

- Device name of your tape device

  Enter the same *<device>* as above.

- Operating system for which you are installing the software

  Select the operating system used by the workstation which will run the Software Analyzer.

- Directory where you want the software to be installed

After you have answered the questions, swa_install will install the appropriate software on your hard drive, then run the configure script to perform the setup required to run the Software Analyzer. If configure succeeds, *and* if you will operate the Software Analyzer only on the workstation where it was installed, skip to Step 4, Set the PATH environment variable. If configure fails, fix the indicated problem and go to Step 3, Run the configure script.

Step 3. Run the configure script

If the swa_install script succeeded in Step 2, skip to Step 4.

- **To run the configure script, change to the directory named opt/hpcol/solar_2 by typing:**

```
cd opt/hpcol/solar_2
./configure
```

You should run the standalone configure script on the workstation where you originally installed the Software Analyzer, *and* on each workstation that NFS mounts the opt/hpcol install tree (and has a local file system). You may run the configure script as root at any time to verify that all files required by the Software Analyzer are linked to the correct locations on the local file system.

The configure script does the following:

- Checks for the existence of the SunSoft OSF/Motif 1.2.2 or 1.2.3 product under $MOTIFHOME. If $MOTIFHOME has not been defined, the script looks under /opt/SUNWmotif (for Motif 1.2.2) or under /usr/dt (for Motif 1.2.3).
- Installs two logic analyzer fonts in the $OPENWINHOME/lib/fonts directory.

$OPENWINHOME is /usr/openwin by default.

- For SunSoft OSF/Motif 1.2.3 only, creates symbolic links between versions 2 and 3 of the Motif shared libraries.

Example

Assume the HP B3740A Software Analyzer was installed on the file server *apple_tree* in the directory */home/apple_tree*.

There are seven workstations who want to share the apple_tree HP B3740 install directory. To share this directory, you must do the following for each system workstation:

1 Log in to the workstation system as root.

2 Mount the apple_tree HP B3740 install directory by typing:

```
mount apple_tree:/home/apple_tree/opt/hpcol /opt/hpcol
```

3 Change to the directory /opt/hpcol/solar_2, and run the configure script to link the necessary HP B3740A files onto your local file system by typing:

```
cd /opt/hpcol/solar_2
./configure
```

The configure script is verbose and will tell you which files failed to link.

4 Follow the instructions given by the configure script, and continue to run it until it succeeds.

Step 4. Set the PATH environment variable

1 Set the PATH environment variable to include the /opt/hpcol/solar_2/bin directory.

If you are using "csh", the syntax is:

```
setenv PATH ${PATH}:/opt/hpcol/solar_2/bin
```

If you are using "sh" or "ksh", the syntax is:

```
PATH=${PATH}:/opt/hpcol/solar_2/bin
export PATH
```

2 After setting PATH, type "swa" to start the Software Analyzer.

The HP E2450A Symbol Utility software, the HP Logic Analyzer system software, and the HP State Analyzer module (HP 16500B only) software major version numbers must match. The HP B3740A Software Analyzer major version number does not need to match the major version number of the other parts. See the *example* software version numbers in table 3.

Table 3 **HP 16500B Products and Software Version Numbers**

Product	Software Version
HP B3740A Software Analyzer	1.00
HP 16500B System Software (SYSTEM)	3.06
HP 16555A Module Software (SYS_034)	3.06
HP E2450A Symbol Utility Software for HP 16500B	3.04

The E2450A Symbol Utility Software ships with the benchtop analyzers.

- If you need to update the HP 16500B system and module software, copy the files from the flexible disks to the /SYSTEM subdirectory on the logic analyzer's hard disk. Then, reboot the HP 16500B.

- If you are updating the HP 1660C/CS or HP 1670A operating system, copy the update from the flexible disks to the flash ROMs. Updates can be ordered from your HP Sales Office.

  a Go to the System Utilities menu.

  b Select the button labeled **`Update FLASH ROM`**.

  c Insert the first flexible disk and follow the onscreen instructions.

  The flexible disks now serve as backup copies for the files on the hard disk or in flash ROM. For more information about copying a file or updating the logic analyzer's system software, see the appropriate logic analyzer User's Guide.

Installing the Symbol Utility Software

The HP E2450A Symbol Utility Software, the HP Logic Analyzer system software, and the HP State Analyzer module software major version numbers must match.

The first time you load the symbol utility, the logic analyzer must read it from the flexible disk at powerup. To install the Symbol Utility Software on the HP logic analyzer, take the following steps:

1 **With the instrument turned off, insert the flexible disk labeled "HP E2450A Symbol Utility software" into the flexible disk drive on the logic analyzer.**

2 **Turn on the instrument.**

The software loads automatically if you inserted the flexible disk prior to turning on the instrument. The software takes a few minutes to load.

CAUTION

Proceed only when the light on the front of the flexible disk drive stops blinking. If you proceed before the light goes out, the installation will be incomplete and you will have to start the process over at step 1.

In the System Configuration menu (System External I/O menu on benchtop logic analyzers) menu, the Symbol Utility should now appear in the Options display. If it does not appear, repeat steps 1 and 2.

When the Symbol Utiltity is loaded on a benchtop analyzer, it shows up here.

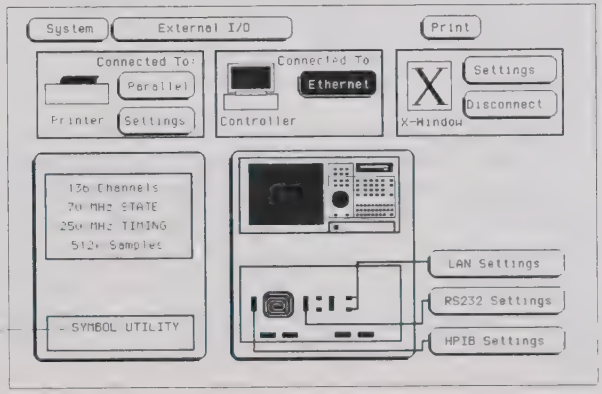

3 Select **System** in the upper-left corner of the display. Then, choose **Symbol Utility** from the pop-up menu.

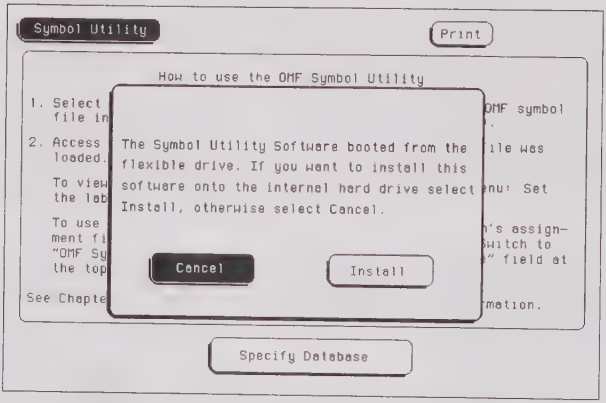
Symbol Utility
Print
How to use the OMF Symbol Utility
The Symbol Utility Software booted from the flexible drive. If you want to install this software onto the internal hard drive select Install, otherwise select Cancel.
Cancel
Install
Specify Database

This figure shows the HP 16500B logic analyzer menu. The benchtop logic analyzers are similar.

If you are using a benchtop logic analyzer, the Install/Cancel menu does not appear. The **Install** button appears to the right of the **Specify Database** button.

4 Select **Install** to copy the files onto the hard disk drive, or select **Cancel** to cancel the operation.

Installation requires about 3 minutes to complete. After the installation is complete, you can remove the Symbol Utility disk from the flexible disk drive and store it as a backup. The Symbol Utility will load automatically whenever you turn on the logic analyzer.

CAUTION Proceed only when the light on the front of the flexible disk drive stops blinking. If you proceed before the light goes out, the installation will be incomplete and you will have to start the process over at step 1.

Glossary

benchtop logic analyzer A small, standalone HP logic analyzer that is not part of the HP 16500 logic analysis system. As of this edition, only the HP 1660C/CS-series and the HP 1670A-series can run the Software Analyzer.

browser A pop-up menu which lets you examine and select OMF symbols.

data label A symbol that refers to an arbitrary value, much like the labels that are available in the logic analyzer without the Symbol Utility. All other symbols refer to addresses. Data labels can be defined only in the General-Purpose ASCII symbol file format.

database file The file created by the symbol utility and stored on the logic analyzer internal hard disk. The file is organized so that the Symbol Utility can efficiently look up the symbol associated with any address or label value. Database files have a ".ns" file name extension.

ELF/DWARF This OMF is a portable format consisting of the ELF (Executable and Linkable Format) and the DWARF (Debugging Information Format) for various processors, including Intel 80960, PowerPC, and MIPS.

GPA The General-Purpose ASCII file format. These symbol files are created by the user with an ASCII text editor.

HP-MRI IEEE-695 The OMF format produced by HP and MRI cross-compilers and cross-assemblers. This format is fully supported by the Symbol Utility IEEE-695 reader.

IEEE-695 A particular format for an OMF. This format is usually produced by language tools for non-Intel microprocessors. Some language tools that claim to output this format may deviate from the IEEE-695 standard in ways that make the OMF file unreadable by the Symbol Utility reader.

language tool chain A set of programs used to generate executable code. For example, a compiler, assembler, and linker.

loaded file A database file that has been loaded into the Symbol Utility.

measurement module Any of the cards that can be inserted into the slots in the HP logic analyzer, such as an oscilloscope, pattern generator, or state analyzer. The HP E2450A Symbol Utility requires a state analyzer measurement module.

OMF A file that contains mixed object code and symbol information. OMF stands for Object Module File. The OMF is produced by the language tool chain.

OMF86 A particular format for an OMF. This format is usually produced by language tools for Intel 80x86-series microprocessors.

point symbol A symbol that refers to a single address.

procedure A term used in the Symbol Utility to refer to procedures, functions, subroutines, or their equivalents.

range symbol A symbol that refers to a range of addresses, such as a module or procedure.

reader A program that generates a database file from a symbol file.

symbol file A file that contains symbol information. This file is produced by the language tool chain.

TI-COFF An OMF produced by language tools for Texas Instruments microprocessors.

user symbol table A table containing the symbols that are created by the user, using the Symbols option in the Format menu. This is the standard symbol capability of the HP logic analyzer.

Win32s A Microsoft product that allows 32-bit Windows applications to run in MS Windows 3.1.

Index

.ns files, 2–3
  loading, 3–11

A
Absolute Section Location option, 3–13
ADDR label, 2–7, 2–21, 3–10, 4–9 to 4–10, 4–12
Address display, 3–21
  Intel 80x86 addresses, 3–21
Align to Byte option, 3–19
alternate fonts, 4–6 to 4–7
arrow keys
  differ on PC or in X-Windows, 1–5
ASCII format (GPA), 3–24 to 3–31
assemble your program, 2–3
assembler, 2–3

B
background
  starting software analyzer in, 1–3, 2–5
base, 2–15, 2–21
Browse button, 1–5
Browse Results display, 3–15, 3–19
browse, symbol database, 3–17
browser, 6–1
browser menu, 3–15 to 3–22
  accessing, 2–15
  using, 2–15
build symbol database, 2-10
  in tutorial, 1–9
buttons
  Browse, 1–5
  Connect, 1–4, 2–6
  Download, 1–4
  Next Line, 2–18
  Next State, 1–10
  Prev Line, 2–18
  Prev State, 1–10
  trace list navigation, 1–4

C
command line options, 2–5
commands, Main window, 3–3 to 3–8
comments, in General-Purpose ASCII format, 3–31
common problems, 4–2
Communications field
  in System Configuration menu, 1–3
compile your program, 2–3
compiler, 2–3
configuration files
  in tutorial, 1–4
Connect button, 1–4, 2–6
connecting to HP logic analyzer, 3–5
  problems, 4–4 to 4–5
connection timeout, 3–5
Context display, 3–21
Control window, 1–4
creating GPA symbol files, 2–4
Current Loaded Files field, 3–12
  Delete , 2-11, 3–12
  using, 2–11
  View field, 3–12

D
DATA label, 4–12, 6–1
data listing, symbols in, 2–21
database file, 6–1
  created during load, 2–10
define trigger
  in tutorial, 1–9
Delete field, 3–12
  using, 2–11
demo program, 1–1, 1–7
  trace data loaded, 1–9
dialog boxes
  File Download, 1–4
  LAN connection, 1–3
disassembler, 4–11, 4–13
disconnecting another user, 4–3
display trace listing
  in tutorial, 1–9
  symbols, 2–21
Download button, 1–4
downloading symbols to HP logic analyzer, 2–7, 3–4
Drive field, 3–10
dynamically loaded code, 3–13

E
editor
  use to create GPA symbol file, 2–4
ELF/DWARF file format, 3–23
Ethernet configuration field
  in System Configuration menu, 1–3
Ethernet configuration options, 4–4 to 4–5
exiting the Software Analyzer, 2–6, 3–4

F
file
  names and line numbers, 3–15 to 3–22
  versions, 3–11
File Download command, 3–4
File Download dialog box, 1–4
file formats, 3–23
Find field, 3–17
font path, 4–6 to 4–7
  alternate or missing, 4–6 to 4–7
formats
  of supported file types, 3–23
FUNCTIONS in GPA format, 3–28

G
General-Purpose ASCII (GPA) format, 3–24 to 3–31
  comments, 3–31
  FUNCTIONS, 3–28
  record format summary, 3–25
  record headers, 3–24 to 3–31
  SECTIONS, 3–27
  SOURCE LINES, 3–30
  START ADDRESS, 3–30
  VARIABLES, 3–29
General-Purpose ASCII symbol file
  address format, 2–4
  creating, 2–4
  simple form, 2–4
generate symbol file option, 2–3
globals and locals, 3–15 to 3–22
GPA, 6–1

H
HP 9000 Series 700
  installing software, 5–5
HP logic analyzer
  connecting to, 3–5
  LAN address, 3–5
HP-MRI IEEE-695, 6–1

I
IEEE-695, 6–1
in use status, 4–3
installation instructions
  for tutorial, 1–2
installing software, 5-2
  for logic analyzer, 5–20
  on HP 9000 Series 700, 5–5

on Solaris, 5–14
on SunOS, 5–7
Symbol Utility software, 5–21
instruction prefetch, 4–11
interface hardware
for LAN, 1–2
Internet Address, 3–5
Invasm Options menu, 4–11
inverse assembler file
in tutorial, 1–5
inverted mouse button settings, 3–7
IP address, 3–5
of logic analyzer, 1–3, 2–5

J
jumping
to next source line, 1–11
to next state, 1–10

L
label, 3–10
entry field for software traces, 1–8
setting base, 2–21
Label field, 3–10
for mapping OMF symbols, 2–9
LAN address
of HP logic analyzer, 3–5
LAN connection
dialog box, 1–3
problems, 4–4 to 4–5
LAN Interface Module, 1–2
language tool chain, 6–1
line number field, 3–22
line numbers, 3–6
link your program, 2–3
linker, 2–3
Listing menu
no symbols in, 4–8
Load field, 2–10, 3–11
load menu, 3–9 to 3–14
using, 2–7
Loaded Database Files pop-up menu, 3–12
loaded file, 6–1
loading
symbol file into meas. module, 2–10
Local File box, 1–4
Logic Analyzer window, 1–4

M
Main window commands, 3–3 to 3–8
mainframe (HP 16500B), 1–2
mapping OMF symbols
to label, 2–9
masking off addresses, 3–19
measurement modules, 2–7, 6-1
choosing, 3–11
on portable logic analyzers, 2–8
messages, 3–32 to 3–34
pods truncated, 1–6
missing fonts, 4–6 to 4–7
Module field, 3–11
mouse button settings, 3–7
moving
in source code, 1–11, 2–18
in trace data, 1–10
multiple files
OMF, 3–11
symbol, 3–11

N
network protocol, 3–5
identified by transport option, 2–5
in tutorial, 1–3
Next Line
operations, 4–13
Next Line button, 2–18
Next State button, 1–10
no symbols in Listing menu, 4–8
numbers
of software versions, 1–2

O
odd-numbered addresses, 3–19
offset
adding to address values, 3–13
all sections, 3–13
code section, 3–13
trigger term, 3–20
Offset option of browser menu, 3–20
OMF file, 6–2
formats supported, 3–23
in tutorial, 1–7
OMF File field, 2–9, 3–10
Refresh field, 3–10
using, 2–3
OMF Load field, using, 2–3
OMF symbol files
creating, 2–3
currently loaded, 2–11
deleting, 2–11
downloading to HP logic analyzer, 3–4
loading, 2–3
versions, 3–11
OMF Symbol Table
browser menu, 3–15 to 3–22
in tutorial, 1–8
using browser menu, 2–15
using load menu, 2–7
OMF symbols
browsing, 3–17
downloading, 2–7
symbol type, 3–16
OMF86, 6–2
options, command line, 2–5

P
path name
of OMF file, 3–21
of source files, 3–21
PC-relative code, 3–13
ping command, 4–4 to 4–5
pods truncated message, 1–6
point symbol, 6–2
prefetch, 3–19, 4–11
offsetting trigger term, 3–20
prerequisites for tutorial, 1–2
Prev Line
operations, 4–13
Prev Line button, 2–18
Prev State button, 1–10
problems, common, 4–2
procedure, 6–2
protocol, network, 3–5

R
range symbol, 6–2
reader, 6–2
record format summary (General Purpose ASCII files), 3–25
record headers, 3–24 to 3–31
reference information, 3–2
Refresh field, 3–10
relocation of code, 3–13
remote X server, 4–6 to 4–7

removing
loaded symbol files, 2–11
required software, 5–2
for HP 9000 Series 700, 5–5
for Solaris, 5–14
for SunOS, 5–7
requirements for tutorial, 1–2
running MS Windows on PC
select Network Protocol, 1–3
running software analyzer
as a background task, 1–3, 2–5

S

sample files for tutorial
configuration file, 1–4
inverse assembler file, 1–5
SAMPLES directory, 1–5
scroll data
by assembly states, 1–10
by source lines, 1–11
Scroll Files field, 3–19
search, symbol database, 3–17
Section Format, 3–24 to 3–31
SECTIONS in GPA format, 3–27
setting up the Software Analyzer, 1–3, 2–5
settings
inverted mouse buttons, 3–7
Source window, 3–6
Settings Connect command, 3–5
Settings Inverted...Mouse command, 3–7
Settings Source View command, 3–6
software
installing, 5–2
installing for logic analyzer, 5–20
installing on Solaris, 5–14
installing on SunOS, 5–7
installing Symbol Utility, 5–21
required, 5–5
Software Analyzer
exiting, 3–4
installing, 5–2
using, 2–2
software required, 5–2
for HP 9000 Series 700, 5–5
for Solaris, 5–14
for SunOS, 5–7
for logic analyzer, 5–20
for Symbol Utility, 5–21
software version numbers, 1–2
source code
not in Source window, 4–9 to 4–10
Source code window, 1–4
SOURCE LINES in GPA format, 3–30
source path, 3–6, 3–8
Source window settings, 3–6
START ADDRESS in GPA format, 3–30
start software analyzer, 1–3
background task, 1–3, 2–5
state analyzer module, 1–2
supported file formats, 3–23
suppressed states, 4–11, 4–13
swa command, 1–3
symbol base, 2–21
symbol browser menu, using, 2–15
symbol database
.ns files, 2–3
creating, 3–11
search results, 3–19
symbol file, 6–2
creating GPA, 2–4
load menu, 3–9 to 3–14
removing, 2–11
using load menu, 2–7
viewing, 2–11
symbol format, 3–15 to 3–22
choosing, 3–22
symbol mode
choosing, 3–22
globals/locals or file/line numbers, 3–22
Symbol Mode field, 3–15, 3–22
symbol type, 3–16
precedence, 2–21
Symbol Type Selection field, 3–15 to 3–16
Symbol Utility
in pop-up menu, 2–7
supports file formats, 3–23
software, 1–3
installing, 5–20 to 5–22
symbols
browsing, 3–17
downloading to HP logic analyzer, 3–4
not in listing menu, 4–8
system software
for logic analyzer, 1–2

T

tab width, 3–6
TI-COFF, 6–2
timeout, connection, 3–5
TMP directory, 1–5
Trace List Control window, 1–4, 1–10, 2–18
Trace List Source window, 2–18
illogical navigation, 4–11
no source code in, 4–9 to 4–10
trace listing, symbols in, 2–21
transport, 3–32
trigger
defined in tutorial, 1–9
on symbol, 2–15
trigger term, 2–15, 3–15 to 3–22
tutorial, 1–2
build symbol database, 1–9
configuration file, 1–4
define trigger, 1–9
display trace listing, 1–9
inverse assembler file, 1–5
OMF file, 1–7
OMF symbol table, 1–8
scroll data by assembly states, 1–10
scroll data by source lines, 1–11
Tutorial steps
1. Start the software analyzer, 1–3
2. Configure the analyzer, 1–4 to 1–6
3. Load the symbol database, 1–7 to 1–8
4. Set up the trigger and capture data, 1–9
5. Scroll data by assembly states, 1–10
6. Scroll data by source lines, 1–11

U

User Symbol Table, 6–2
User Symbols, 2–21, 3–16

V

valid line numbers, 3–22
VARIABLES in GPA format, 3–29
versions
of software numbers, 1–2
of symbol files, 3–11
View field, 3–12
viewing
loaded symbol files, 2–11

W
wildcard characters
  * character, 3–17
  ? character, 3–17
Win32s, 6–2
  installing, 5–3
windows displayed
  for software analyzer, 1–4

X
X terminal, 4–6 to 4–7
X-Windows, 1–5

© Copyright Hewlett-Packard Company 1987, 1990, 1993-1995
All Rights Reserved.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

Document Warranty

The information contained in this document is subject to change without notice.

Hewlett-Packard makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability or fitness for a particular purpose.

Hewlett-Packard shall not be liable for errors contained herein or for damages in connection with the furnishing, performance, or use of this material.

Safety

This apparatus has been designed and tested in accordance with IEC Publication 348, Safety Requirements for Measuring Apparatus, and has been supplied in a safe condition. This is a Safety Class I instrument (provided with terminal for protective earthing). Before applying power, verify that the correct safety precautions are taken (see the following warnings). In addition, note the external markings on the instrument that are described under "Safety Symbols."

Warning

- Before turning on the instrument, you must connect the protective earth terminal of the instrument to the protective conductor of the (mains) power cord. The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. You must not negate the protective action by using an extension cord (power cable) without a protective conductor (grounding). Grounding one conductor of a two-conductor outlet is not sufficient protection.
- Only fuses with the required rated current, voltage, and specified type (normal blow, time delay, etc.) should be used. Do not use repaired fuses or short-circuited fuseholders. To do so could cause a shock of fire hazard.
- Service instructions are for trained service personnel. To avoid dangerous electric shock, do not perform any service unless qualified to do so. Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.
- If you energize this instrument by an auto transformer (for voltage reduction), make sure the common terminal is connected to the earth terminal of the power source.
- Whenever it is likely that the ground protection is impaired, you must make the instrument inoperative and secure it against any unintended operation.
- Do not operate the instrument in the presence of flammable gasses or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.
- Do not install substitute parts or perform any unauthorized modification to the instrument.
- Capacitors inside the instrument may retain a charge even if the instrument is disconnected from its source of supply.
- Use caution when exposing or handling the CRT. Handling or replacing the CRT shall be done only by qualified maintenance personnel.

Safety Symbols

Instruction manual symbol: the product is marked with this symbol when it is necessary for you to refer to the instruction manual in order to protect against damage to the product.

Hazardous voltage symbol.

Earth terminal symbol: Used to indicate a circuit common connected to grounded chassis.

WARNING

The Warning sign denotes a hazard. It calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a Warning sign until the indicated conditions are fully understood and met.

CAUTION

The Caution sign denotes a hazard. It calls attention to an operating procedure, practice, or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product. Do not proceed beyond a Caution symbol until the indicated conditions are fully understood or met.

Hewlett-Packard
P.O. Box 2197
1900 Garden of the Gods Road
Colorado Springs, CO 80901

Product Warranty

This Hewlett-Packard product has a warranty against defects in material and workmanship for a period of one year from date of shipment. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products that prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by Hewlett-Packard.

For products returned to Hewlett-Packard for warranty service, the Buyer shall prepay shipping charges to Hewlett-Packard and Hewlett-Packard shall pay shipping charges to return the product to the Buyer. However, the Buyer shall pay all shipping charges, duties, and taxes for products returned to Hewlett-Packard from another country.

Hewlett-Packard warrants that its software and firmware designated by Hewlett-Packard for use with an instrument will execute its programming instructions when properly installed on that instrument. Hewlett-Packard does not warrant that the operation of the instrument software, or firmware will be uninterrupted or error free.

Limitation of Warranty

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by the Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

No other warranty is expressed or implied. Hewlett-Packard specifically disclaims the implied warranties of merchantability or fitness for a particular purpose.

Exclusive Remedies

The remedies provided herein are the buyer's sole and exclusive remedies. Hewlett-Packard shall not be liable for any direct, indirect, special, incidental, or consequential damages, whether based on contract, tort, or any other legal theory.

Assistance

Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales Office.

Certification

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology, to the extent allowed by the Institute's calibration facility, and to the calibration facilities of other International Standards Organization members.

About this edition

This is the fifth edition of the *HP B3740A Software Analyzer User's Guide.*

Printed in USA.

Edition dates are as follows:

First edition, May 1994

Second edition, June 1994

Third edition, July 1994, B3740-97002

Fourth edition, March 1995, B3740-97003

Fifth edition, November 1995, B3740-97004

Many product updates do not require manual changes; and, conversely, manual corrections may be done without accompanying product changes. Therefore, do not expect a one-to-one correspondence between product updates and manual updates.

Hewlett-Packard
Printed in the USA

Local Area Sales Offices
Arranged alphabetically by country

Albania
IBS (Information & Business Systems)
Hewlett-Packard Distributor
1, Rr. Kongresi Permetit
Tirana
tel (5) 422385
fax (5) 4223864

Algeria
R.T.I.
Realisation Telematiques Internationales
Lot A, Villa no 57
Baba - Hassen
Wilaya de Tipaza
Algerie
tel (213) 230-6430
fax (213) 230-6431

Angola
Handled by HiPerformance, South Africa

Argentina
Hewlett-Packard Argentina
Montaneses 2140/50
1428 Buenos Aires
tel (54-1) 787-7115, 787-7287

Australia
Canberra
Hewlett-Packard Australia Ltd.
Thynne Street, Fern Hill Park
Bruce, ACT 2617
tel (61/6) 251-6999
fax (61/6) 251-6948

Melbourne
Hewlett-Packard Australia Ltd.
31-41 Joseph Street
Blackburn, VIC 3130
tel (61/3) 9272-2895
fax (61/3) 9898-7831

Perth
Measurement Innovation (WA) Pty. Ltd.
Kishorn Court
Suite 3, 58 Kishorn Road
Mount Pleasant WA 6153
tel (61/9) 316-2757
fax (61/9) 316-1392

Sydney
Hewlett-Packard Australia Ltd.
17-23 Talavera Road
North Ryde, N.S.W. 2113
tel (61/2) 950-7444
fax (61/2) 888-9072

Austria
Hewlett-Packard GmbH
Lieblgasse 1
A-1222 Vienna
tel (43/1) 25000-0
fax (43/1) 25000-444

Bahrain
BAMTEC
P.O.Box 10373
Capital Centre
Shop 116
Road 1405
Area 314
Manama
tel (973) 27 56 78
fax (973) 27 66 69

Belgium
Hewlett-Packard Belgium S.A./N.V.
Boulevard de la Woluwe
100/102 Woluwedal
B 1200 Brussels
tel (32/2) 778-34-17
fax (32/2) 778-34-14

Brazil
Hewlett-Packard Brasil
Alameda Rio Negro, 750
06454-000 - Alphaville - Barueri -
São Paulo
tel (55-11) 726-8155, 726-8160
fax (55-11) 726-8171

Hewlett-Packard Brasil
Rua Lauro Mueller, 116
Grupo 803 - Edificio Torre Rio Sul
22290-160 - Botafogo -
Rio de Janeiro
tel (55-21) 541-4404
fax (55-21) 295-2195

Brunei
Komputer Wisman Sdn Bhd
Room 1, 3rd Floor
Jalan Tutong
BS Begawan
Brunei Darussalem
tel (673/2) 23918
telex (0809) 2447

Bulgaria
S&T Bulgaria Ltd.
Hewlett-Packard Distributor
114 Vasil Levski Blvd.
1504 Sofia
tel (2) 468429
fax (2) 468391

Canada
Hewlett-Packard (Canada) Ltd.
5150 Spectrum Way
Mississauga, Ontario
L4W 5G1
tel (905) 206-4725
fax (905) 206-4739

Alberta
Hewlett-Packard (Canada) Ltd.
150 6th Avenue S. W.
Petro Canada Tower, Ste. 3600
Calgary, Alberta
T2P 3Y7
tel (403) 262-0777
fax (403) 237-9309

Hewlett-Packard (Canada) Ltd.
10155 102nd Street
Commerce Place, Suite 2100
Edmonton, Alberta
T5J 4G8
tel (403) 425-4725
fax (403) 420-4550

British Columbia
Hewlett-Packard (Canada) Ltd.
13575 Commerce Parkway, Ste. 110
Richmond, British Columbia
V6V 2L1
tel (604) 270-2277
fax (604) 270-0859

Manitoba
Hewlett-Packard (Canada) Ltd.
200 Graham Avenue, Ste. 1000
Winnipeg, Manitoba
R3C 4L5
tel (204) 942-4725
fax (204) 989-3553

New Brunswick
(see Nova Scotia)

Newfoundland
(see Nova Scotia)

Nova Scotia
Hewlett-Packard (Canada) Ltd.
238 Brownlow Avenue, Ste. 103
Park Place Centre
Dartmouth, Nova Scotia
B3B 1Y2
tel (902) 468-4725
fax (902) 468-4311

Ontario
London *(see below)*

Hewlett-Packard (Canada) Ltd.
5150 Spectrum Way
Mississauga, Ontario
L4W 5G1
tel (905) 206-4725
fax (905) 206-4739

Ottawa
Hewlett-Packard (Canada) Ltd.
2670 Queensview Drive
Ottawa, Ontario
K2B 8K1
tel (613) 820-6483
fax (613) 820-0377

Prince Edward Island
(see Nova Scotia)

SALES OFFICES
Arranged alphabetically by country (cont'd)

Quebec
Hewlett-Packard (Canada) Ltd.
17500 Trans Canada Highway
South Service Road
Kirkland, Quebec
H9J 2X8
tel (514) 697-4232
fax (514) 697-6941

Quebec City
(see Quebec)

Saskatchewan
(see Manitoba)

Chile
ASC. S.A.
Austria 2041
Santiago
tel (56-2) 274-7676
fax (56-2) 223-1912

China, People's Republic of
Beijing
China Hewlett-Packard Co., Ltd.
5-6/F West Wing Office
China World Trade Center
No. 1 Jian Guo Men Wei Avenue
Beijing 100004 - PRC
tel (86/10) 505-3888
fax (86/10) 505-0394
telex 085-22601 CTSHP CN
cable 1920 Beijing

Chengdu
China Hewlett-Packard Co., Ltd.
7/F, the Electronic Foreign Trade Building
#88 East 2nd Section,
Yi-Huan-Lu Road
Chengdu 610051, PRC
tel (86/28) 443-2666
fax (86/28) 443-2618

Guangzhou
China Hewlett-Packard Co., Ltd.
Room 1201-1204,
Gitic Plaza Main Bldg.
339 Huanshi Dong Road
Guangzhou 510060 - PRC
tel (86/20) 331-1421
fax (86/20) 331.1413
telex 44556 GPHGZ CN

Shanghai
China Hewlett-Packard Co., Ltd.
Room 638, Office Building
Shanghai Center
1376 Nan Jing Road West
Shanghai 200040 - PRC
tel (86/21) 279-8668
fax (86/21) 279-8943
telex 086-33577 CHPSB CN

Shenzhen
China Hewlett-Packard Co., Ltd.
4/F Huaqiang Component Building Zhenhua
Road, Shangbu District Shenzhen City
518031 - PRC
tel (86/755) 368-608
fax (86/755) 363-154

Xi'An Branch Office
3/F Dongxin Scientific
and Technical Trade Center
No 16A Middle Section
Yan-Ta-Lu Road Xi'An
PRC
tel (86/29) 526.9379
fax (86/29) 526.9243

Colombia
Instrumentacion Ltda
Calle 115 No. 11-A-10
Bogota
tel (57-1) 612-1313
fax (57-1) 612-0805

Costa Rica
I.S. de Costa Rica
Calle 25, Avenida 6 & 8, No. 648
San Jose
tel (506) 233-3722
fax (506) 255-3528

Cyprus
Telerexa Ltd.
P.O. Box 1152
Valentine House
8 Stassandrou St.
Nicosia
tel (3572) 44.56.28
fax (3572) 44.55.84
telex 5845 tlrx cy

Czech Republic
Hewlett-Packard Ceskoslovensko spo
Novodvorska 82
14200 Praha 4
tel 2/471 73 21
fax 2/474 32 93

Denmark
Hewlett-Packard A/S
Kongevejen 25
DK-3460 Birkerod
tel 45 45 99 10 00
fax 45 45 82 06 30

Hewlett-Packard A/S
Brenstrupgaardsvej 13
8200 Aarhus N
tel 45 86 78 30 00
fax 45 86 78 30 33
telex 37409 hpas dk

Dominican Republic
Esacomp, S.A.
Calle Seminario No. 55
Ens. Piantini
Santo Domingo
tel (809) 563-6350
fax (809) 565-0332

Ecuador
CYEDE Cia. Ltda.
Avenida Eloy Alfaro 1749
Quito
tel (593-2) 44-4224
fax (593-2) 44-4223

Egypt
ORASCOM
Onsi Sawiris & Co
P.O. Box 1191
160, 26th July Street
Aguza/Cairo
tel (202) 302-69-30
fax (202) 344-02-01
telex 92768 orscm un

Finland
Hewlett-Packard Oy
Piispankalliontie 17
02200 Espoo (Helsinki)
tel (358/0) 887 21
fax (358/0) 8872 2923

Hewlett-Packard Oy
Teknologiantie 6
90570 Oulu
tel (358/81) 5515 144
fax (358/81) 5515 145

France
Hewlett-Packard France
Test et Mesure
Z.A. de Courtaboeuf
1 Avenue du Canada
91947 Les Ulis
tel 69 82 60 60
fax 69 82 60 61

Germany
Headquarters
Hewlett-Packard GmbH
Herrenberger Strasse 130
71034 Böblingen
tel (49) 7031/14-0
fax (49) 7031/14-2999

Bad Homburg
Hewlett-Packard GmbH
Hewlett-Packard Strasse 1
61352 Bad Homburg
tel (49) 6172/16-0
fax (49) 6172/16-1309

Berlin
Hewlett-Packard GmbH
Lntzowplatz 15
10785 Berlin
tel (49) 30/25452-0
fax (49) 30/25452-162

Böblingen
Hewlett Packard GmbH
Schickardstrasse 2
71034 Böblingen
tel (49) 7031/14-0
fax (49) 7031/14-6429

Bonn
Hewlett-Packard GmbH
Friedrich-Ebert-Allee 26
53113 Bonn
tel (49) 228/23400-1
fax (49) 228/235-315

Hamburg
Hewlett-Packard GmbH
Überseering 16
22297 Hamburg
tel (49) 40/63808-0
fax (49) 40/63808-327

Hannover
Hewlett-Packard GmbH
Baumschulenallee 20-22
30625 Hannover
tel (49) 511/9577-0
fax (49) 511/9577-126

Karlsruhe
Hewlett-Packard GmbH
Hewlett-Packard-Str. 8
76337 Waldbronn (Karlsruhe)
tel (49) 7243/602-0
fax (49) 7243/602-212

Leipzig
Hewlett-Packard GmbH
Wehlitzer Strasse 2
04435 Schkeuditz
tel (49) 34204/82-0
fax (49) 34204/82-220

München (Munich)
Hewlett-Packard GmbH
Eschenstrasse 5
82024 Taufkirchen
tel (49) 89/61412-0
fax (49) 89/61412-300

Nürnberg
Hewlett-Packard GmbH
Emmericher Strasse 13
90411 Nürnberg
tel (49) 911/9524-0
fax (49) 911/9524-140

Ratingen
Hewlett-Packard GmbH
Berliner Strasse 111
40880 Ratingen
tel (49) 2102/905-0
fax (49) 2102/905-300

Great Britain

See United Kingdom

Greece

G-Systems
Hewlett-Packard Distributor
76, Ymittou Street
116 34 Athens
tel (30/1) 7264045
fax (30/1) 726 40 20

Hong Kong

Hewlett-Packard (HK) Ltd.
17-21/F Shell Tower
Times Square Matheson Street
Causeway Bay
Hong Kong
tel (852) 2599-7777
fax (852) 2506-9261

Hungary

Hewlett-Packard Magyarorszag Kft.
Erzsebet kiralyne utja 1/c
1146 Budapest
tel (36) 1 2524505
fax (36) 1 2527441

India

Bangalore
Hewlett-Packard India Pvt. Ltd.
Embassy Point
150 Infantry Road
Bangalore 560001
tel (91/80) 225-3024, 225-3039
fax (91/80) 225-6186
telex 845-2773 HP IN

Bombay
Hewlett-Packard India Pvt. Ltd.
Unit 1, - B Wing
Ground Floor, Neelam Center
Hind Cycle Road
Worli, Bombay 400 025
tel (91/22) 493-4722, 493-4723
fax (91/22) 493-7823
telex 11-76812 HPIB IN

Calcutta
Hewlett-Packard India Pvt. Ltd.
803 Central Plaza
2/7 Sarat Bose Road
Calcutta 700 020
tel (91/33) 748709
fax (91/33) 748571

Hyderabad
Hewlett-Packard India Pvt. Ltd.
5-9-13 Taramandal Complex
9th Floor, Saifabad
Hyderabad 500 004
tel (91/40) 232-679
fax (91/40) 220.012, 231.756
telex 425-2422 HPIL IN

New Delhi
Hewlett-Packard India Pvt. Ltd. Paharpur
Business Centre
21 Nehru Place
New Delhi 110 019
tel (91/11) 647-2311
fax (91-11) 646-1117
telex 31-71127 PBC IN

Indonesia

P.T. BERCA
Hardayaperkasa
Jl. Taman Tanah Abang III No. 31
Jakarta, 10160
tel (62/21) 385-5381
fax (62-21)-380-9166

Ireland

Hewlett-Packard Ireland Ltd.
Hewlett Packard House
Stradbrook Road
Blackrock, Co. Dublin
tel (353/1) 284-4633
fax (353/1) 284-5134
telex 30430

Iran

Evertech
11 bis, rue Toepffer
1206 Geneve
tel 4122/346 92 92
fax 4122/346 86 91
telex 421 787

Israel

Computation and Measurement
Systems (CMS) Ltd.
11, Hashlosha Street
Tel-Aviv 67060
tel (9723) 538-03-80
fax (9723) 537-50-55
telex 371234 HPCMS

Italy

For information on any product or service call: (39) 02 92 122 999

Hewlett-Packard Italiana S.p.A.
Via G. di Vittorio 9
20063 Cernusco s/N (Mi)
tel (39/2) 92-121
fax (39/2) 92-141-485

Easy-call Informazioni di vendita e supporto (39/2) 92 122 999

Napoli
Hewlett-Packard Italiana S.p.A.
Via Emanuele Gianturco 92 G
80146 NAPOLI (Na)
tel (39/81) 73-40-100
fax (39/81) 73-40-109

Roma Eur
Hewlett-Packard Italiana S.p.A.
Viale del Tintoretto, 200
00142 Roma Eur
tel (39/6) 54-831
fax (39/6) 54-01-661

Torino
Hewlett-Packard Italiana S.p.A.
Via Praglia, 15
10044 Pianezza (To)
tel (39/11) - 9685.1
fax (39/11) - 96 79 383

Japan

For presale assistance in product selection and other product or general information:

Hewlett-Packard Japan Ltd.
Test & Measurement
Measurement Assistance Center
tel 81-426-48-0722
fax 81-426-48-1073

Akita
Hewlett-Packard Japan Ltd.
Nihonseimei Akita Chuodori Bldg.
4-2-7 Nakadori, Akita-shi
Akita 010

Atsugi
Hewlett-Packard Japan Ltd.
9-32 Tamuracho, Atsugi-shi
Kanagawa 243

SALES OFFICES
Arranged alphabetically by country (cont'd)

Chiba
Hewlett-Packard Japan Ltd.
WBG Malibu East Bldg. 19F
2-6 Nakase
Mihama-ku, Chiba-shi
Chiba 261-71

Fukuoka
Hewlett-Packard Japan Ltd.
Daisan Hakata-Kaisei Bldg.
13-6 Hakataekiminami Hakata-ku,
Fukuoka-shi
Fukuoka 812

Hachioji
Hewlett-Packard Japan Ltd.
9-1 Takakura-cho, Hachioji-shi
Tokyo 192

Hamamatsu
Hewlett-Packard Japan Ltd.
219-21 Motoshiro-machi,
Hamamatsu-shi
Shizuoka 430

Hiroshima
Hewlett-Packard Japan Ltd.
Nissei- Heiwakoen Bldg.
3-25 Nakajima-cho Naka-ku
Hiroshima 730

Kawasaki
Hewlett-Packard Japan Ltd.
3-2-2 Sakado
Takatsu-ku, Kawasaki-shi
Kanagawa 213

Kobe
Hewlett-Packard Japan Ltd.
1-3-2 Muroya Nishi-ku, Kobe-shi
Hyogo 651-22

Kumagaya
Hewlett-Packard Japan Ltd.
Nissei-Kumagaya Bldg.
2-42 Miya-machi, Kumagaya-shi
Saitama 360

Kyoto
Hewlett-Packard Japan Ltd.
Maeda NS Bldg.
518 Akinono-machi Nijyo-Kudaru
Karasuma, Nakakyo-ku
Kyoto 604

Matsumoto
Hewlett-Packard Japan Ltd.
Forum Honjo Bldg
2-4-1 Honjo,
Matsumoto-shi
Nagano 390

Mito
Hewlett-Packard Japan Ltd.
Mito Mitsui Bldg.
1-4-73 Sannomaru, Mito-shi
Ibaraki 310

Nagoya
Hewlett-Packard Japan Ltd.
Nagoya Kokusai Center Bldg.
1-47-1 Nakono Nakamura-ku,
Nagoya-shi
Aichi 450

Omiya
Hewlett-Packard Japan Ltd.
Mitsui-seimei Omiya Miyamachi Bldg.
2-96-1 Miyamachi, Omiya-shi
Saitama 303

Osaka
Hewlett-Packard Japan Ltd.
Chuo Bldg.
5-4-20 Nishinakajima Yodogawa-ku
Osaka 532

Sapporo
Hewlett-Packard Japan Ltd.
Sumitomo- seimei Sapporo Chuo Bldg. 1-1-14
Nanjo- higashi Chuo-ku, Sapporo-shi
Hokkaido 060

Sendai
Hewlett-Packard Japan Ltd.
Yamaguchi Bldg.
1-1-31 Ichibancho Aoba-ku,
Sendai-shi
Miyagi 980

Takaido
Hewlett-Packard Japan Ltd.
3-8-20 Takaido-higashi,
Suginami-ku
Tokyo 168

Toyota
Hewlett-Packard Japan Ltd.
Nakane- Nissei Bldg.
4-25-18 Nishi-machi,
Toyota-shi
Aichi 471

Tsukuba
Hewlett-Packard Japan Ltd.
Tsukuba-Mitsui Bldg.
1-6-1 Takezono,Tsukuba-shi
Ibaraki 305

Utsunomiya
Hewlett-Packard Japan Ltd.
Chiyodaseimei-Utsunomiya Bldg.
2-3-1 Odori,Utsunomiya-shi
Tochigi 320

Jordan
Scientific & Medical Supplies Co.
P.O. Box 1387
Amman
tel (962/6) 62-49-07
fax (962/6) 62-82-58
telex 21456 sabco jo

Korea
Hewlett-Packard Korea Ltd.
HP Korea House
25-12, Yoido-dong
Youngdeung po-ku
Seoul, 150-010
tel (82/2) 769-0114
fax (82/2) 784-7084

Taegu
Hewlett-Packard Co. Ltd.
18/F Young Nam Tower B/D
111, Shin Cheon-dong, Dong-Gu
Taegu
tel (82/53) 754-2666
fax (82/53) 752-4696

Taejeon
Hewlett-Packard Co. Ltd.
3rd F, Hong In Tower Officetel
536-9, Bong Myung-dong,
Yusung-gu, Taejeon
tel (82/42) 828-6700-4
fax (82/42) 828-6709

Kuwait
Al-Khaldiya Electronics &
Electricals Equipment Co.
P.O. Box 830
Safat 13009
tel (965) 48 13 049
fax (965) 48 12 983

Lebanon
Computer Information Systems C.I.S.
Lebanon Street
Chammas Bldg.
P.O.Box 11-6274
Dora-Beirut
tel (961/1) 405-413
fax (961/1) 601.906
tel/fax (3579) 514-256 (Cyprus-based line)
telex 42309 chacis le

Malawi
Handled by HiPerformance,
South Africa

Malaysia
Hewlett-Packard Sales (M) SDN BHD
Ground Floor,
Wisma CycleCarri
288, Jalan Raja Laut
50350 Kuala Lumpur
tel (60/3) 298-6555
fax (60/3) 291-5495

Penang
Hewlett-Packard Sales (M) SDN BHD
6/F Wisma Penang Garden
42 Jalan Sultan Ahmad Shah
10050 Penang
tel (60/4) 376-532
fax (60/4) 371-027
telex MA 41111

Mauritus
Handled by HiPerformance,
South Africa

Mexico
Hewlett-Packard de Mexico, S.A.de C.V.
Prolongación Reforma No.700
Col. Lomas de Santa Fé
01210 Mexico D.F.
tel (52-5) 326-4392
fax (52-5) 326-4301

Morocco
SICOTEL
Complexe des Habous
Tour C, avenue des Far
Casablanca 01
tel (212) 231-22-70
fax (212) 231-65-45
telex 27604

Mozambique
Handled by HiPerformance, South Africa

Nambia
Handled by HiPerformance, South Africa

The Netherlands
Hewlett-Packard Nederland B.V.
Postbus 667
1180 AR Amstelveen
tel 020-547.6669
fax 020-547.7765

New Zealand
Hewlett-Packard (N.Z.) Ltd.
186-190 Willis Street
Wellington - New Zealand
tel (64/4) 382-0400
fax (64/4) 384-3380

Nigeria
Management Information Systems Co. Ltd.
3 Gerrard Road
P.O. Box 53386
Ikoyi, Lagos
tel (2341) 269.34.23
fax (2341) 269.34.19
telex 23582 DATEC NG

Norway
Hewlett-Packard Norge AS
Drammensveien 169
Postboks 60 Skøyen
N-0212 OSLO
Norway
tel (47) 22-73-56-00
fax (47) 22-73-56-19

Oman
IMTAC LLC
P.O. Box 51196
Mina al Fahal
Muscat
tel (968) 707-727, (968) 707-723
fax (968) 796-639, (968) 797-709

Pakistan
Mushko Electronics (PVT) Ltd.
68-W Sama Plaza
Blue Area, G-7
Islamabad 44000
tel (92/51) 828-459
fax (92/51) 816-190
telex 54001 Muski Pk

Mushko Electronics (PVT) Ltd.
Oosman Chambers
Abdullah Haroon Road
Karachi 74400
tel (92/21) 524-131
fax (92/21) 568-2298
telex 29094 MUSKO PK

Panama
Electronico Balboa, S.A.
Edif. El Dorado
Ave El Paiscal #30
Apartado 4929
Panama 5
tel (507) 236-0722
fax (507) 236-1820

Peru
Cia Electro Medica, S.A.
Los Flamencos 145, Of. 301-302
San Isidro, Lima 27
tel (51-14) 241-4325
fax (51-14) 242-3703

Philippines
Hewlett-Packard
Philippines Corporated
9th Floor, Rufino Pacific Towers,
6784 Ayala Avenue, Makati
Metro Manilla
tel (63-2) 894.1451
fax (63-2) 811.0635

Poland
Hewlett-Packard Polska
Ul. Newelska 6
01-447 Warszawa
tel 22/375065
fax 22/374783
telex 813919

Portugal
Hewlett-Packard Portugal S.A.
Rua Gregório Lopes, Lote 1732A
Torre de Sto. António
1400 Lisboa
tel (351/1) 301 7330
fax (351/1) 301 6332/3

Puerto Rico
Hewlett-Packard Puerto Rico (3175)
Centro Europa
1492 Ponce de Leon Avenue, Suite 203
Santurce, PR 00907
tel (809) 289-8900
fax (809) 289-8925

Qatar
Qatar Datamations Systems
Al Ahed Building, 5th floor
Al Muthof Street
Doha
tel 974/43.99.00
fax 974/43.21.54
telex 4833

Romania
S&T Romania SRL
Hewlett-Packard Distributor
Sitraco Centre
Blvd. Dimitries Cantemir 1
Etaj II - 210, Sector 4
Bucuresti
tel (1) 3237250
fax (1) 3237200

Russia/CIS
Hewlett-Packard Company
Pokrovski Blvd. 4/17 Kv.12
101000 Moscow
Russia
tel (7/095) 92 35 01
fax (7/095) 230-2611

Saudi Arabia
Modern Electronics Establishment
P.O. Box 2769
King Abdul Azia St.
Al-Khobar 31952
tel (9663) 894 65 48, 895 17 64
fax (9663) 894 46 58
telex 871106 HPMEEK SJ
cable ELECTA, AL-KHOBAR

Modern Electronics Establishment
P.O. Box 1228
Zaben Building, Tahliah St.
Jeddah - 21431
tel (966/2) 661-1447
fax (966/2) 661-0857
telex 602712 FARNAS SJ
cable ELECTA, JEDDAH

Modern Electronics Establishment
P.O. Box 22015
Prince Musad Ibn Abdulaziz St.
Riyadh 11495
tel (966/1) 476-3030
fax (966/1) 476-2570/476-7649
telex 402049 MEERYD SJ
cable ROUFKO

Singapore
Hewlett-Packard Singapore (Sales) Pte. Ltd.
150 Beach Road
#29-00 Gateway West
Singapore 0718
tel (65) 291-9088
fax (65) 296-7089
telex 087-34209 HPSGSO RS

Slovak Republic
High Performance Systems
Hewlett-Packard Distributor
Polianky 5
844 14 Bratislava
tel 7/760217
fax 7/763408

Slovenia, Croatia, Macedonia
Hermes-Plus
Hewlett-Packard Distributor
Celovska 73
61000 Ljubljana
Slovenia
tel (661) 159 33 22
fax (661) 558 597

South Africa
HiPerformance Systems (Pty.) Ltd.
P.O. Box 120, Howard Place
7450 Cape Town
tel (27/21) 685-7922
fax (27/21) 685-3785

HiPerformance Systems (Pty.) Ltd. Private
Bag, Wendywood
2144 Sandton
tel (27/11) 806-1000
fax (27/11) 806-1213

SALES OFFICES
Arranged alphabetically by country (cont'd)

Spain
Barcelona
Hewlett-Packard Española, S.A.
Avda. Diagonal, 605
08028 Barcelona
tel 93-401 91 00
fax 93-430 84 68

Madrid
Hewlett-Packard Española, S.A.
Crta N-VI km 16,500
28230 Las Rozas, Madrid
tel 1-631 16 00
fax 1-631 18 30

Sevilla
Hewlett-Packard Española, S.A.
luis de Morales, 32
EdificoForum
41018 Sevilla
tel 95-453 29 10
fax 95-453 30 92

Valencia
Hewlett-Packard Española, S.A.
plaza de America, 2 - 5Y
46004 Valencia
tel 96-395 74 75
fax 96-395 42 11

Vizcaya
Avda de Zugazarte
Helett-Packard Española, S.A.
Avda de zugazarte, 8
Edif El Abra, 4
48930 Las Arenas, Guecho
tel 94-481 80 00
fax 94-481 80 40

Sri Lanka
Precision Technical Services (PVT)Ltd.
65/14, Park Street
Colombo 2
tel (941) 687791
fax (941) 687731

Sweden
Hewlett-Packard Sverige AB
Skalholtsgatan 9
164 97 Kista
tel (46/8) 444 20 00
fax (46/8) 444 25 25

Göteborg
Hewlett-Packard Sverige AB
Vädursgatan 6
Box 5328
402 27 Göteborg
tel (46/31) 35-18-00
fax (46/31) 35-18-99

Malmö
Hewlett-Packard Sverige AB
Hjälmaregatan 3
Box 371
201 23 Malmö
tel (46/40) 660 72 00
fax (46/40) 660 72 99

Malm
Hewlett-Packard Sverige AB
J gersrov gen 160
Box 28066
200 28 Malm
tel (46/40) 22-79-00
fax (46/40) 22-79-99

Service Office
Hewlett-Packard Sverige AB
Arabygatan
Box 3161
350 43 Växjö
tel (46/470) 396-06
fax (46/470) 154-05

Switzerland
Berne
Hewlett-Packard (Schweiz) AG
Meriedweg 11
CH-3172 Niederwangen (Bern)
tel (41) 31-980 31 11
fax (41) 31-980 33 90

Gèneva
Hewlett-Packard (Suisse) SA
39, rue de Veyrot
CH-1217 Meyrin 1
tel (41) 22-780 41 11
fax (41) 22-780 42 20

Zürich
Hewlett-Packard (Schweiz) AG
In der Luberzen 29
CH-8902 Urdorf/Zürich
tel (41) 1-735 71 11
fax (41) 1-735 77 00

Taiwan, ROC
Hewlett-Packard Taiwan Ltd.
Hewlett-Packard Building
8/F No. 337, Fu Hsing North Road
Taipei, 10483
tel (886/2) 712-0404
fax (886/2) 718-9860

Chungli
Hewlett-Packard Taiwan Ltd.
No. 20 Kao-Shuang Road
Ping-Chen, 32404
Taoyuan Hsieh
tel (886/3) 492-9666
fax (886/3) 492-9669

Kaohsiung
Hewlett-Packard Taiwan Ltd.
12/F,10, Su Wei 4 Road
Lin-Ya Distric
Kaohsiung
tel (886/7) 330-1199
fax (886/7) 330-8568

Taichung
Hewlett-Packard Taiwan Ltd.
10F, 540, Sec. 1
Wen-Hsin Road
Taichung
tel (886/4) 327-0153
fax (886/4) 326-5274

Thailand
Hewlett-Packard (Thailand) Ltd.
11/F Pacific Place
140 Sukhumvit Road
Bangkok 10110
tel (66/2) 254-6720
fax (66/2) 254-6731

Trinidad and Tobago
Borde Communications
1 Valsayn Road
Curepe, P.O. Box 897
Port-of-Spain, Trinidad
tel (809) 663-2087
fax (809) 645-3352

Tunisia
Precision Electronique
5, rue de Chypre
Mutuelle Ville
1002 Tunis Belvedere
tel (216/1) 785-037, 890-672
fax (216/1) 780-241
telex (0409) 18238 TELEC TN

Turkey
Hewlett-Packard
Bilgisayar ve Olcum
Sistemleri A.S. Karum
Business Center, Suite 461
Iran Caddesi 21
06680 Kavaklidere
Ankara
tel (90/312) 468 87 70
fax (90/312) 468 87 78

Ukraine
S&T Ukraine Ltd
50, Popudrenk St.
253660 Kiev
tel (44) 559 47 63, 559 29 88
fax (44) 559 50 33

United Arab Emirates
Abu Dhabi
Emitac Ltd.
P.O. Box 2711
Abu Dhabi
tel (971/2) 77-04-19
fax (971/2) 72-30-58
telex 46306

Dubai
Emitac Ltd.
Block RBS Arenco Bldg.
Zabel Road
P.O. Box 8391
Dubai
tel (971/4) 37-75-91
fax (971/4) 37-08-99
telex 48710

United Kingdom
Bracknell
Hewlett-Packard Limited
Cain Road
Bracknell
Berkshire RG12 1HN
tel (44/1344) 366666
fax (44/1344) 362852
telex 849 555

United States

To request formal quotations, place orders, and other order information:

Test & Measurement Customer
Business Center
P.O. Box 4026
Englewood, CO 80155-4026
tel 1-800-829-4444

For presale assistance in product selection and other product or general information:

Test & Measurement Customer
Information Center
tel 1-800-452-4844

Alabama

Hewlett-Packard Co. (3114)
620 Discovery Drive
Huntsville, AL 35806
tel (205) 971-2000
fax (205) 971-8899

Arizona

Hewlett-Packard Co. (2401)
8080 Pointe Parkway West
Phoenix, AZ 85044
tel (602) 273-8000
fax (602) 273-8022, 273-8080

Hewlett-Packard Co. (2406)
3400 East Britannia Drive
Bldg. C, Suite 130
Tucson, AZ 85706
tel (602) 573-7400
fax (602) 573-7429

California

Hewlett-Packard Co. (2403)
1421 S. Manhattan Avenue
Fullerton, CA 926301
tel (714) 999-6700
fax (714) 758-7559

Hewlett-Packard Co. (2438)
130 Cremona, Suite A
Goleta, CA 93117
tel (805) 685-6100
fax (805) 685-6163

Irvine *(see Fullerton)*

Hewlett-Packard Co. (2417)
5245 Pacific Concourse Drive, Suite 100
Los Angeles, CA 90045
tel (310) 643-5112
fax (310) 535-2601

Hewlett-Packard Co. (2426)
351 E. Evelyn Avenue
Bldg. 333
Mountain View, CA 94039
tel (415) 694-2000
fax (415) 694-3594

Hewlett-Packard Co. (2415)
3831 N. Freeway Blvd., Bldg.C, Suite 100
Sacramento, CA 95834
tel (916) 567-8500
fax (916) 567-8777

Hewlett-Packard Co. (2404)
9606 Aero Drive
San Diego, CA 92123
tel (619) 279-3200
fax (619) 268-8487, 279-0560

Santa Barbara *(see Goleta)*

Hewlett-Packard Co. (2428)
5805 Sepulveda Blvd, Suite 800
Van Nuys, CA 91411
tel (818) 786-5800
fax (818) 779-2350

Ventura *(see Van Nuys)*

Colorado

Hewlett-Packard Co. (2441)
3005 Center Green Drive, Suite 205
Boulder, CO 80301
tel (303) 938-3065
fax (303) 938-3025

Hewlett-Packard Co. (2411)
24 Inverness Place East
Englewood, CO 80112
tel (303) 649-5000
fax (303) 649-5787

Connecticut

Hewlett-Packard Co. (4457)
263 Tresser Blvd., 9th Floor
Stamford, CT 06901
tel (203) 324-1003
fax (203) 325-5680

Hewlett-Packard Co. (4458)
115 Glastonbury Blvd.
Glastonbury, CT 06033
tel (203) 633-8100
fax (203) 659-6087

District of Columbia
(see Rockville, MD)

Florida

Hewlett-Packard Co. (3179)
5900 N. Andrews, Suite 100
Fort Lauderdale, FL 33309
tel (305) 938-9800
fax (305) 938-2293

Hewlett-Packard Co. (3177)
6177 Lake Ellenor Drive
Orlando, FL 32809
tel (407) 859-2900
fax (407) 826-9309

Hewlett-Packard Co. (3166)
5550 Idlewild, Suite 150
Tampa, FL 33634
tel (407) 859-2900
fax (407) 826-9295

Georgia

Hewlett-Packard Co. (3108)
20 Perimeter Summit Blvd.
Atlanta, GA 30319
tel (404) 648-0000
fax (404) 648-7010

Hawaii

Hewlett-Packard Co. (2409)
3660 Waialae Ave, Suite 102
Honolulu, HI 96816
tel (808) 732-1566
fax (808) 739-3100

Illinois

Hewlett-Packard Co. (2619)
2205 E. Empire Street
Bloomington, IL 61704
tel (309) 664-4000
fax (309) 664-4100

Hewlett-Packard Co. (2603)
1200 East Diehl Road
Naperville, IL 60566
tel (708) 245-3000
fax (708) 245-3600

Hewlett-Packard Co. (2601)
5201 Tollview Drive
Rolling Meadows, IL 60008
tel (708) 342-2000
fax (708) 342-2022

Indiana

Hewlett-Packard Co. (2605)
201 W. 103rd Street, Suite 100
Indianapolis, IN 46290
tel (317) 582-4400
fax (317) 582-4500

Hewlett-Packard Co. (2635)
111 E. Ludwig Road, Suite 108
Ft. Wayne, IN 46825
tel (219) 480-3700
fax (219) 480-3730

Iowa

Hewlett-Packard Co. (2612)
4050 River Center Court
Cedar Rapids, IA 52402
tel (319) 393-0606
fax (319) 378-1024

Kansas

Hewlett-Packard Co. (2622)
P.O. Box 780408
3450 N. Rock Road, Suite 300
Wichita, KS 67226
tel (316) 636-4040
fax (316) 636-4966

Kentucky

Hewlett-Packard Co. (2623)
305 N. Hurstbourne Parkway
Suite 100
Louisville, KY 40222-5141
tel (502) 329-4800
fax (502) 329-4890

Maryland

Hewlett-Packard Co. (4432)
3701 Koppers Street
Baltimore, MD 21227
tel (410) 644-5800
fax (410) 362-7650

Hewlett-Packard Co. (4430)
2101 Gaither Road
Rockville, MD 20850
tel (301) 258-2000
fax (301) 258-5986

Massachusetts

Hewlett-Packard Co. (4450)
29 Burlington Mall Road
Burlington, MA 01803-4182
tel (617) 270-7000
fax (617) 221-5240

SALES OFFICES
Arranged alphabetically by country (cont'd)

Michigan

Hewlett-Packard Co. (2617)
3033 Orchard Vista S.E., Suite 100
Grand Rapids, MI 49546
tel (616) 975-3200
fax (616) 975-3290

Hewlett-Packard Co. (2607)
39550 Orchard Hill Place Drive
Novi, MI 48376
tel (810) 380-2100
fax (810) 380-2450

Minnesota

Hewlett-Packard Co. (2606)
2025 W. Larpenteur Avenue
St. Paul, MN 55113
tel (612) 644-1100
fax (612) 641-9787

Missouri

Hewlett-Packard Co. (2611)
6601 Winchester Avenue
P.O. Box 18230
Kansas City, MO 64133-8230
tel (816) 737-0071
fax (816) 737-4690

Hewlett-Packard Co. (2610)
530 Maryville Centre Drive
St. Louis, MO 63141
tel (314) 542-1500
fax (314) 542-1585

Nebraska

Hewlett-Packard Co. (2616)
2533 N. 117th Avenue
Omaha, NE 68164
tel (402) 493-0300
fax (402) 491-6230

New Jersey

Hewlett-Packard Co. (4415)
West 120 Century Road
Paramus, NJ 07653
tel (201) 599-5000
fax (201) 599-5629

Hewlett-Packard Co. (4417)
20 New England Ave. West
Piscataway, NJ 08854
tel (908) 562-6100
fax (908) 562-6406

New Mexico

Hewlett-Packard Co. (2402)
5130 Masthead NE
Albuquerque, NM 87109
tel (505) 823-6100
fax (505) 823-1243

Hewlett-Packard Co. (2420)
1362-C Trinity Drive
Los Alamos, NM 87544
tel (505) 662-6700
fax (505) 662-4312

New York

Hewlett-Packard Co. (4444)
114 Great Oaks Office Park
Albany, NY 12203
tel (518) 452-9947
fax (518) 452-8989

Buffalo *(see Cheektowaga)*

Hewlett-Packard Co. (4445)
Airport Commerce Park
305 Cayuga Road, Suite 160
Cheektowaga, NY 14225
tel (716) 264-4100
fax (716) 264-4150

Hewlett-Packard Co. (4440)
5010 Campuswood Drive
East Syracuse, NY 13057
tel (315) 463-2727
fax (315) 463-3150

Hewlett-Packard Co. (4442)
290 Woodcliff Drive
Fairport, NY 14450
tel (716) 264-4000
fax (716) 264-4150

Huntington *(see Melville)*

Hewlett-Packard Co. (4411)
7 Corporate Center Drive
Melville, NY 11747
tel (516) 753-0555
fax (516) 753-3438

Hewlett-Packard Co. (4412)
399 Park Avenue, 26th Floor
New York, NY 10022
tel (212) 350-6700
fax (212) 350-6810

Rochester *(see Fairport)*

Hewlett-Packard Co. (4409)
Executive Square Office Bldg.
66 Middlebush Road
Wappinger Falls, NY 12590
tel (914) 298-9125
fax (914) 298-3338

North Carolina

Hewlett-Packard Co. (3142)
2000 Regency Parkway, Suite 175
Cary, NC 27511
tel (919) 467-6600
fax (919) 460-2296

Hewlett-Packard Co. (3145)
9401 Arrowpoint Blvd.
Charlotte, NC 28210
tel (704) 527-8780
fax (704) 559-7444

Hewlett-Packard Co. (3111)
7029 Albert Pick Road, Suite 100
Greensboro, NC 27409
tel (910) 665-1800
fax (910) 668-1797

Raleigh *(see Cary)*

Ohio

Hewlett-Packard Co. (2624)
4501 Erskine Road
Cincinnati, OH 45242
tel (513) 985-6200
fax (513) 985-6300

Cleveland *(see Strongsville)*

Hewlett-Packard Co. (2614)
540 Office Center Place
Columbus, OH 43230-5321
tel (614) 478-6200
fax (614) 478-6299

Hewlett-Packard Co. (2604)
7887 Washington Village Drive
Dayton, OH 45459
tel (513) 291-7500
fax (513) 291-7600

Hewlett-Packard Co. (2608)
15885 Sprague Road
Strongsville, OH 44136
tel (216) 243-7300
fax (216) 234-7230

Oklahoma

Hewlett-Packard Co. (3182)
3525 NW 56th Street Suite C100
Oklahoma City, OK 73112
tel (405) 946-9499
fax (405) 948-4760

Hewlett-Packard Co.(3183)
6655 South Lewis, Suite 105
Tulsa, OK 74136
tel (918) 481-2285
fax (918) 481-2250

Oregon

Hewlett-Packard Co. (2413)
15115 S.W. Sequoia Parkway
Suite 100
Portland, OR 97224
tel (503) 598-8000
fax (503) 598-8155

Pennsylvania

Hewlett-Packard Co. (2609)
111 Zeta Drive
Pittsburgh, PA 15238
tel (412) 782-0400
fax (412) 784-3340

Hewlett-Packard Co. (4420)
2750 Monroe Blvd.
Valley Forge, PA 19482-0713
tel (215) 666-9000
fax (215) 666-2034

Hewlett-Packard Co. (4420)
1400 Morris Drive, Suite 300
Wayne, PA 19087-5580
tel (610) 408-6000
fax (610) 408-6034

Tennessee

Hewlett-Packard Co. (3117)
404 BNA Drive
Bldg. 200, Suite 510
Nashville, TN 37217
tel (615) 367-4700
fax (615) 399-4616

Texas

Hewlett-Packard Co. (3197)
10415 III Morado Circle, Suite 100
Austin, TX 78759
tel (512) 346-3855
fax (512) 338-7201

Dallas *(see Richardson)*

Hewlett-Packard Co. (2405)
5700 Cromo Drive, Suite 100
El Paso, TX 79912
tel (915) 833-4400
fax (915) 833-4444

Hewlett-Packard Co. (3187)
2000 West Loop South
Houston, TX 77027
tel (713) 439-5300
fax (713) 439-5495

Hewlett-Packard Co. (3185)
930 E. Campbell Road
Richardson, TX 75081
tel (214) 231-6101
fax (214) 699-4337

Hewlett-Packard Co. (3188)
14100 San Pedro Avenue, Suite 100
San Antonio, TX 78232
tel (210) 494-9336
fax (210) 491-1299

Utah

Hewlett-Packard Co. (2412)
348 E. Winchester, Suite 150
Salt Lake City, UT 84107
tel (801) 265-6200
fax (801) 265-6390

Virginia

Chesapeake *(see Glen Allen)*

Hewlett-Packard Co. (4435)
3141 Fairview Park Drive, Suite 300
Falls Church, VA 22042
tel (703) 204-2100
fax (703) 204-2425

Hewlett-Packard Co. (3113)
4401 Waterfront Drive, Suite 150
Glen Allen, VA 23060
tel (804) 747-7750
fax (804) 965-9297

Norfolk *(see Glen Allen)*

Richmond *(see Glen Allen)*

Roanoke *(see Glen Allen)*

Washington

Hewlett-Packard Co. (2410)
15815 S.E. 37th Street
Bellevue, WA 98006
tel (206) 643-4000
fax (206) 643-8748

Wisconsin

Hewlett-Packard Co. (2615)
250 North Patrick Blvd., Suite 100
Brookfield, WI 53045
tel (414) 879-2200
fax (414) 879-2218

Uruguay

CONATEL S.A.
Ejido 1690
Montevideo
tel (598-2) 92-0314, 92-1276
fax (598-2) 92-0660

Venezuela

Hewlett-Packard de Venezuela
3ra. Transversal, Los Ruices Norte
Edificio Segre, Caracas
tel (58-2) 239-4133
fax (58-2) 239-3080

Zambia

Handled by HiPerformance, South Africa

Zimbabwe

Handled by HiPerformance, South Africa

Please Send Directory Corrections to:

Test & Measurement Catalog
MS: 54L-AF
Hewlett-Packard Company
5301 Stevens Creek Blvd.
P.O. Box 58059
Santa Clara, CA 95052-8059
tel (408) 553-7271
fax (408) 553-6779

Regional Sales Offices

If no T&M sales office is listed for your country or area, please contact one of these main regional offices:

Asia Pacific

Hewlett-Packard Asia Pacific Ltd.
17-21/F Shell Tower, Times Square
1 Matheson Street, Causeway Bay
Hong Kong
tel (852) 2599-7777
fax (852) 2506-4997

Hewlett-Packard Japan Ltd.
3-29-21 Takaido-higashi, Suginami-ku
Tokyo 168
Japan
tel (81/3) 3331-6111
fax (81/3) 3335-1478

Canada

Hewlett-Packard (Canada) Ltd.
5150 Spectrum Way
Mississauga, Ontario L4W 5G1
tel (905) 206-4725
fax (905) 206-4739
telex 419019 hps

Eastern Central Europe

Hewlett-Packard GmbH
Lieblgasse 1
P.O. Box 72
A-1222 Vienna, Austria
tel (43/1) 25000-0
fax (43/1) 25000-444
telex 2134-425

Europe

Hewlett-Packard S.A.
Route du Nant-d'Avril 150
CH-1217 Meyrin 2
Switzerland
tel (41) 22/780-81-11
fax (41) 22/780-85-42
telex 419019 hps

Latin America

Hewlett-Packard Co.
5200 Blue Lagoon Drive, 9th Floor
Miami, Florida, U.S.A. 33126
tel (305) 267-4245
fax (305) 267-4288

Middle East and Africa

Hewlett-Packard S.A.
International Sales Branch
Middle East/Africa
Rue de Veyrot 39
P.O. Box 364
1217 Meyrin 1
Gèneva, Switzerland
tel (41/22) 780-4111
fax (41/22) 780-4770
telex 418907

United States

P.O. Box 4026
Englewood, CO 80155-4026
tel 1-800-452-4844



5959-6047

Printed in U.S.A.